

ASC/3-1000 CONTROLLER WITH:

- DATABASE: 7801
 - SOFTWARE: V2.41.10
 - ETHERNET MODULE

 - OVERLAPS
 - IN EEPROM
 - KEYBOARD ENTERED
- A = 4
 B = 3
 C = 2
 D = 1
- ANALOG TELEMETRY MODULE: 32825G1
 - INTERNAL RS-232 TELEMETRY
 - TEST INPUT A =
 - TEST INPUT B =

LEGEND

BIU	BUS INTERFACE UNIT
BU()	C/C, BIU ()
CB()	CIRCUIT BREAKER ()
C/C	CONNECTING CABLE
CCA	CONTROLLER CABLE "A"
CDP	C/C, DR POWER
CMA	MMU/CMU CABLE "A"
CMB	MMU/CMU CABLE "B"
CPO	C/C PRE-EMPT OUTPUTS
CPP	C/C PRE-EMPT POWER
DR	DETECTOR RACK
DS()	DOOR SWITCH ()
FL()	FLASHER ()
FR()	FLASH XFER. RELAY
LS()	LOAD SWITCH
MC	MERCURY CONTACTOR
MP	MAIN PANEL
PAP	POWER-AUX PANEL
PSP	CAB. PWR. SUPPLY
SA	SURGE ARRESTOR
TB-()	TERM. BLOCK ()

MAIN PANEL PLUG-IN REQUIREMENTS

BIU2 T&F	BIU3 T&F	LS9 PED 2 BEAcons	LS10 PED 4 BEAcons	LS11 PED 6 BEAcons	LS12 PED 8 BEAcons	LS13 OL "A"	LS14 OL "B"	LS15 OL "C"	LS16 OL "D"
BIU1 T&F	LS1 VEH 1	LS2 VEH 2	LS3 VEH 3	LS4 VEH 4	LS5 VEH 5	LS6 VEH 6	LS7 VEH 7	LS8 VEH 8	FL1 □ 1CKT ■ 2CKT
FR1 L R V1 V5	FR2 L R V2 V6	FR3 L R V3 V7	FR4 L R V4 V8	FR5 A C	FR6 B D	K1 LS 24V CONT.			


■ DENOTES TYPE OF OPERATION AND/OR WHERE PLUG-IN IS REQUIRED. L = LEFT, R = RIGHT.
 ☒ DENOTES WHERE "UNUSED RED" JUMPER PART NUMBER 32448G1 IS REQUIRED. INSTALL BETWEEN PINS 1 & 3 FOR LOAD SWITCH OR PINS 6 & 8 AND 5 & 7 FOR FLASH TRANSFER RELAY.

FLASH:
 □ 02&6 YELLOW, ALL OTHERS RED.
 ■ ALL RED.
 ■ RELAYS DE-ENERGIZED FOR FLASH.
 □ RELAYS ENERGIZED FOR FLASH.

FLASHER	
PIN	FUNCTION
7	CIRCUIT #1
8	CIRCUIT #2
9	CHASSIS GND
10	AC COMMON
11	115 VAC
12	-----

LOAD SWITCH	
PIN	FUNCTION
1	115 VAC
2	CHASSIS GND
3	RED/DW OUTPUT
4	-----
5	YEL OUTPUT
6	RED/DW INPUT
7	GRN/W OUTPUT
8	YEL INPUT
9	+24 VDC
10	GRN/W INPUT
11	AC COMMON
12	-----

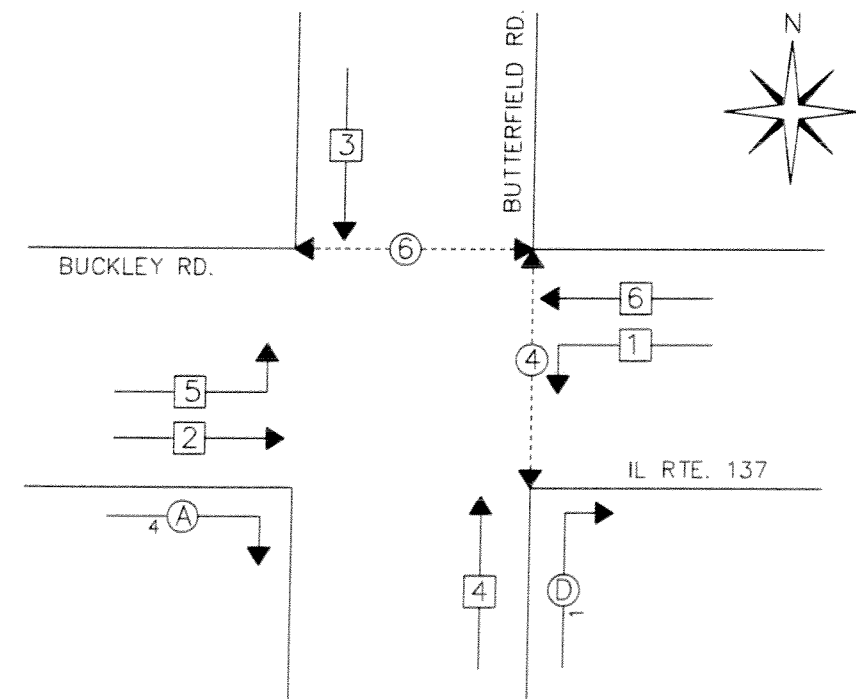

① 2.2K
10W




SHEET 1 OF 11

3 USE ONLY COPPER CONDUCTORS FOR FIELD AND SERVICE CONNECTIONS.
 2 CONNECT A.C. SERVICE TO TERMINAL BLOCK 501 (LINE), 502 (NEUTRAL) AND GB2 (EARTH) ON RIGHT SIDEWALL OF CABINET.
 ① INSTALL 2.2K, 10 WATT LOAD RESISTORS BETWEEN PINS 7 AND 11 ON LOAD SWITCHES 9, 10, 11 & 12.


NOTES: UNLESS SPECIFIED OTHERWISE

DESIGNER G.V. T.C.C.	DATE 02/03/97	 ECONOLITE CONTROL PRODUCTS INC.	 TRAFFIC CONTROL CORPORATION	780 W. BELDEN SUITE D ADDISON, IL 60101
DRAWN CM TCC	3/24/08			CABINET SPECIFICATION: TS2TYPE1 2002 SPEC PLUG AND GO
CABINET SIZE	65" DBL DOOR	CUSTOMER: IDOT DIST.1/LAKE COUNTY		
INSPECTED		INTERSECTION: IL RTE. 137(BUCKLEY RD.) @ BUTTERFIELD RD.		
APPROVED		LOCATION: LIBERTYVILLE		
CUSTOMER P.O.	3339	INSTALLED BY	SALES ORDER NO.	SIZE
		ERM	104630A	B
		DRAWING #TS20216PG-104630A IL RTE. 137(BUCKLEY) @ BUTTERFIELD		


AUXILLARY SWITCH PANEL

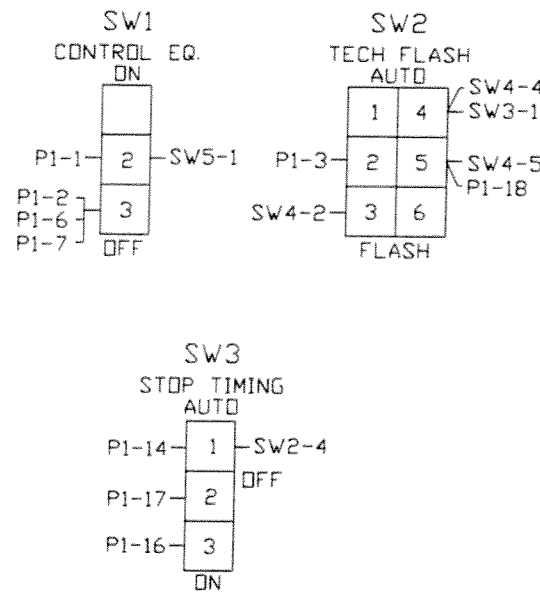

POLICE SWITCH PANEL






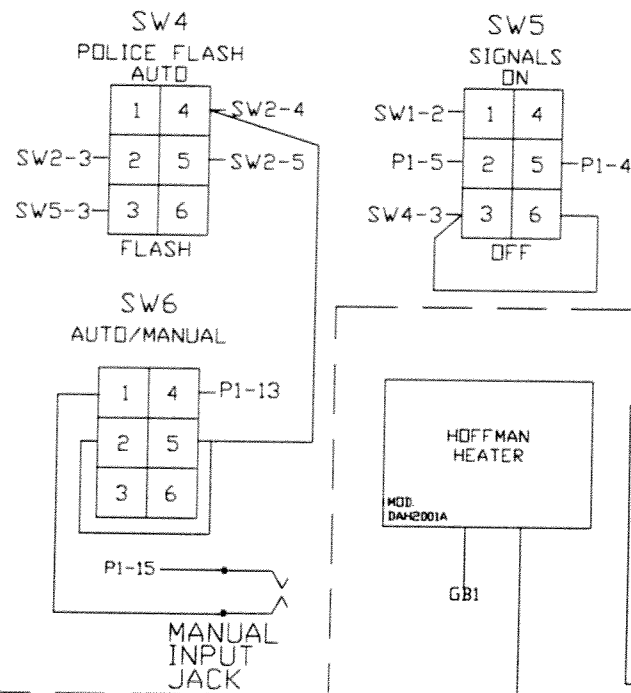


POWER/AUX PANEL (PAP) 34830G5

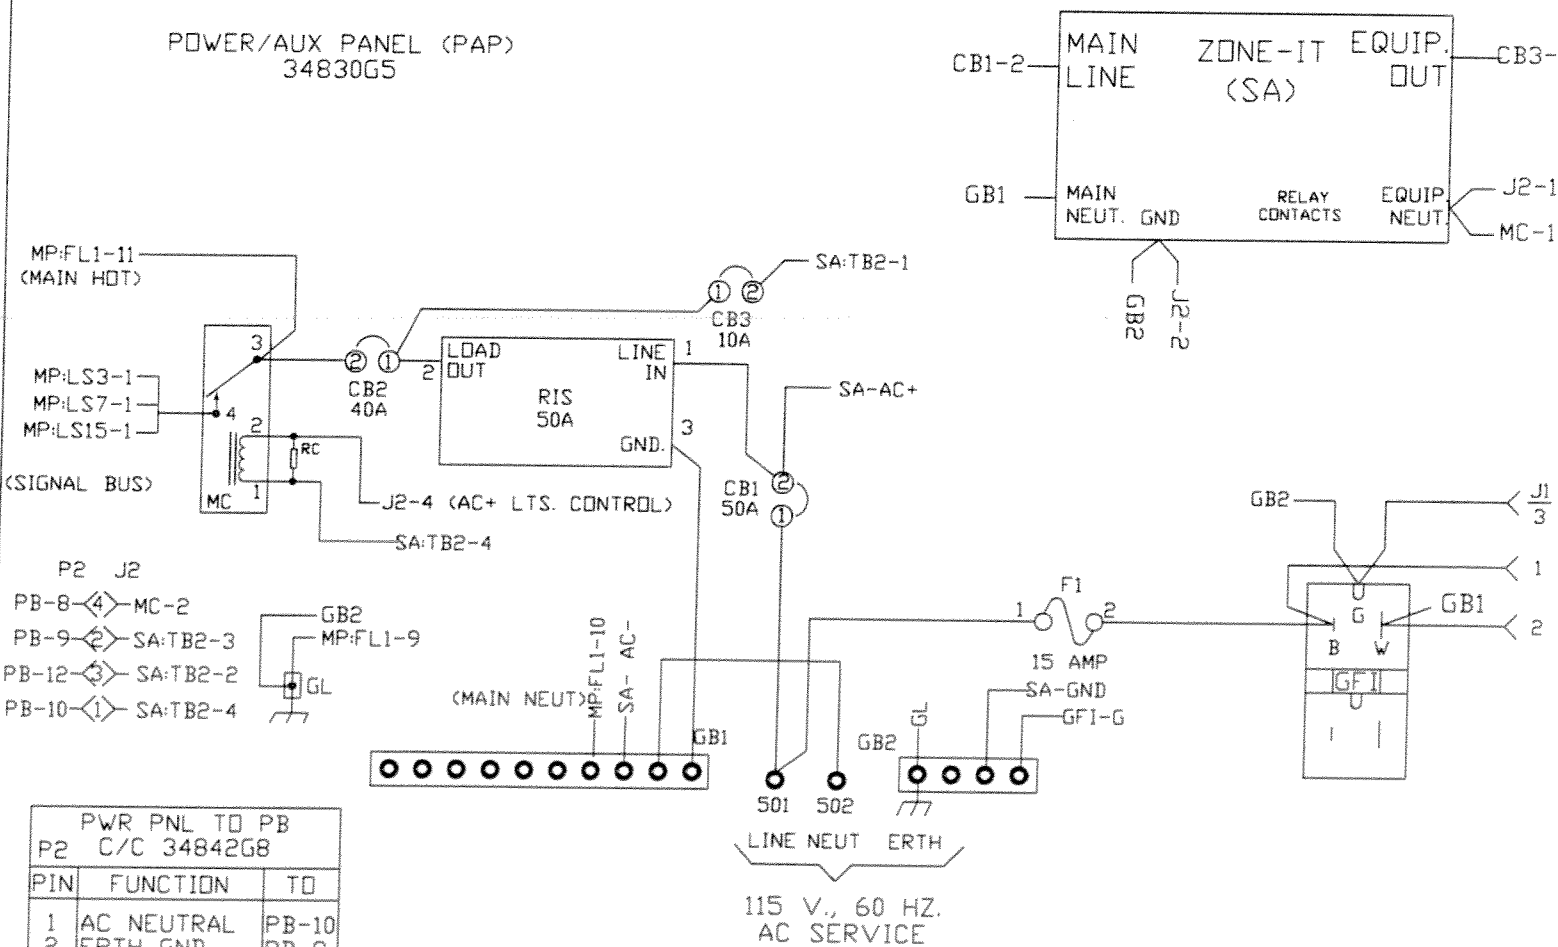

PWR PNL TO PB
 P2 C/C 34842G8

PIN	FUNCTION	TO
1	AC NEUTRAL	PB-10
2	ERTH GND	PB-9
3	FLT AC LINE	PB-12
4	SIG BUS CONT	PB-8

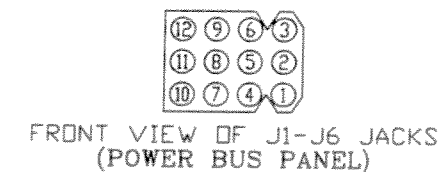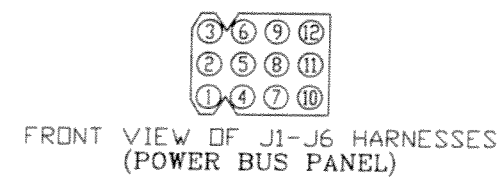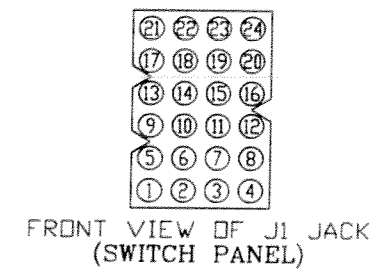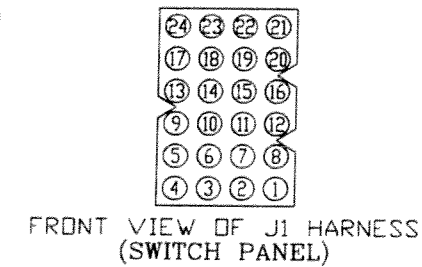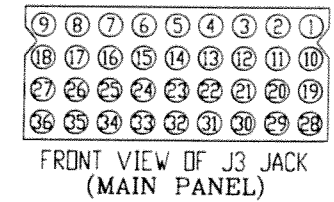
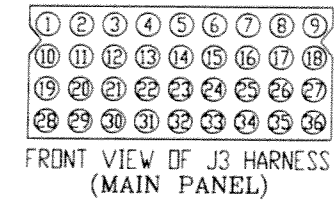


J3	P1
J3-36 1 FILTER AC LINE (OUT)	P1-1 SW1-2
MMB-1 2 SWITCHED AC LINE (IN)	P1-2 SW1-3
MMA-37 3 FLASH CONTROL BUS (OUT)	P1-3 SW2-2
K1-10 4 SIGNAL BUS CONTROL (IN)	P1-4 SW5-5
FR6-2 5 FLASH RELAY CONTROL (IN)	P1-5 SW5-2
MMB-2 6 START DELAY AC BUS (IN)	P1-6 SW1-3
MMA-20 7 MMU FLASH CONTROL BUS (IN)	P1-7 SW1-3
8 SPARE	P1-8 ----
9 SPARE	P1-9 ----
10 SPARE	P1-10 ----
11 SPARE	P1-11 ----
12 SPARE	P1-12 ----
A-39 13 OPT-MANUAL CONT. ENABLE (IN)	P1-13 ----
A-35 14 LOGIC GROUND	P1-14 SW3-1
A-40 15 OPT-INTERVAL ADVANCE (IN)	P1-15 ----
A-31 16 MMU STOP TIME (OUT)	P1-16 SW3-3
A-30 17 CONTROLLER STOP TIME (IN)	P1-17 SW3-2
A-32 18 LOCAL FLASH STATUS (IN)	P1-18 SW2-5
A-38 19 OPT-COORD FREE (IN)	P1-19 ----
A-33 20 OPT-ALARM 1 (IN)	P1-20 ----
A-34 21 OPT-ALARM 2 (IN)	P1-21 ----
K1-9 22 OPT-LOADSWITCH TEST (IN)	P1-22 ----
B-3 23 MMU 24V MON. 2 (IN)	P1-23 ----
B-4 24 +24 VDC	P1-24 ----


J3	J1
A-35 25 LOGIC GROUND	J1-1 TB1-1
K1-11 26 +24 VDC (IN)	J1-2 TB1-2
27 ----	---- TB1-3
B-5 28 MMU FAULT MONITOR (IN)	J1-4 TB1-4
J1-31B 29 LINE FREQ. REFERENCE (IN)	J1-5 TB1-5
30 ----	---- TB1-6
J1-27B 31 +12 VAC (IN)	J1-7 TB1-7
K1-10 32 SIGNAL BUS CONTROL (IN)	J1-8 TB1-8
33 ----	---- TB1-9
K1-2 34 FILTERED AC NEUTRAL (IN)	J1-10 TB1-10
MMB-18 35 CONT. EQUIP. AC LINE (OUT)	J1-11 TB1-11
J3-1 36 FILTERED AC LINE (IN)	J1-12 TB1-12

CONFIRMATION BEACONS

- EVP 3 = EB
- EVP 4 = SB
- EVP 5 = WB
- EVP 6 = NB

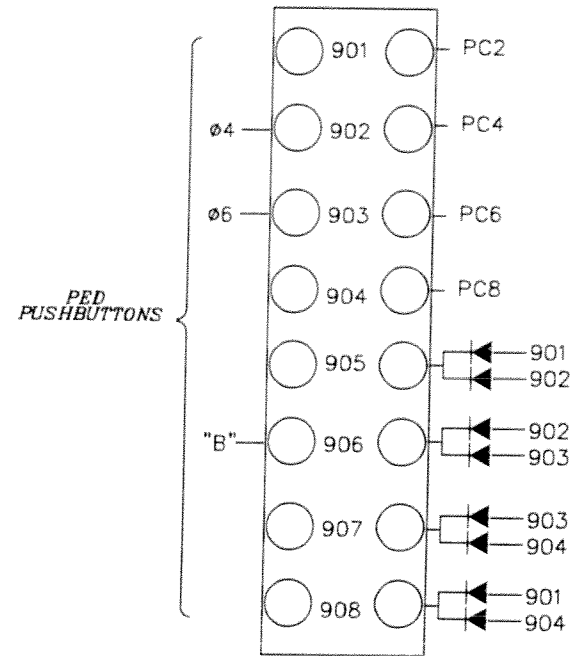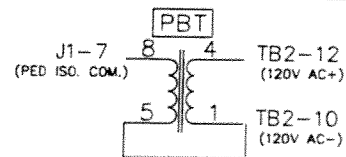


P.B. "B" N.E. CORNER CALLS Ø'S 4&6

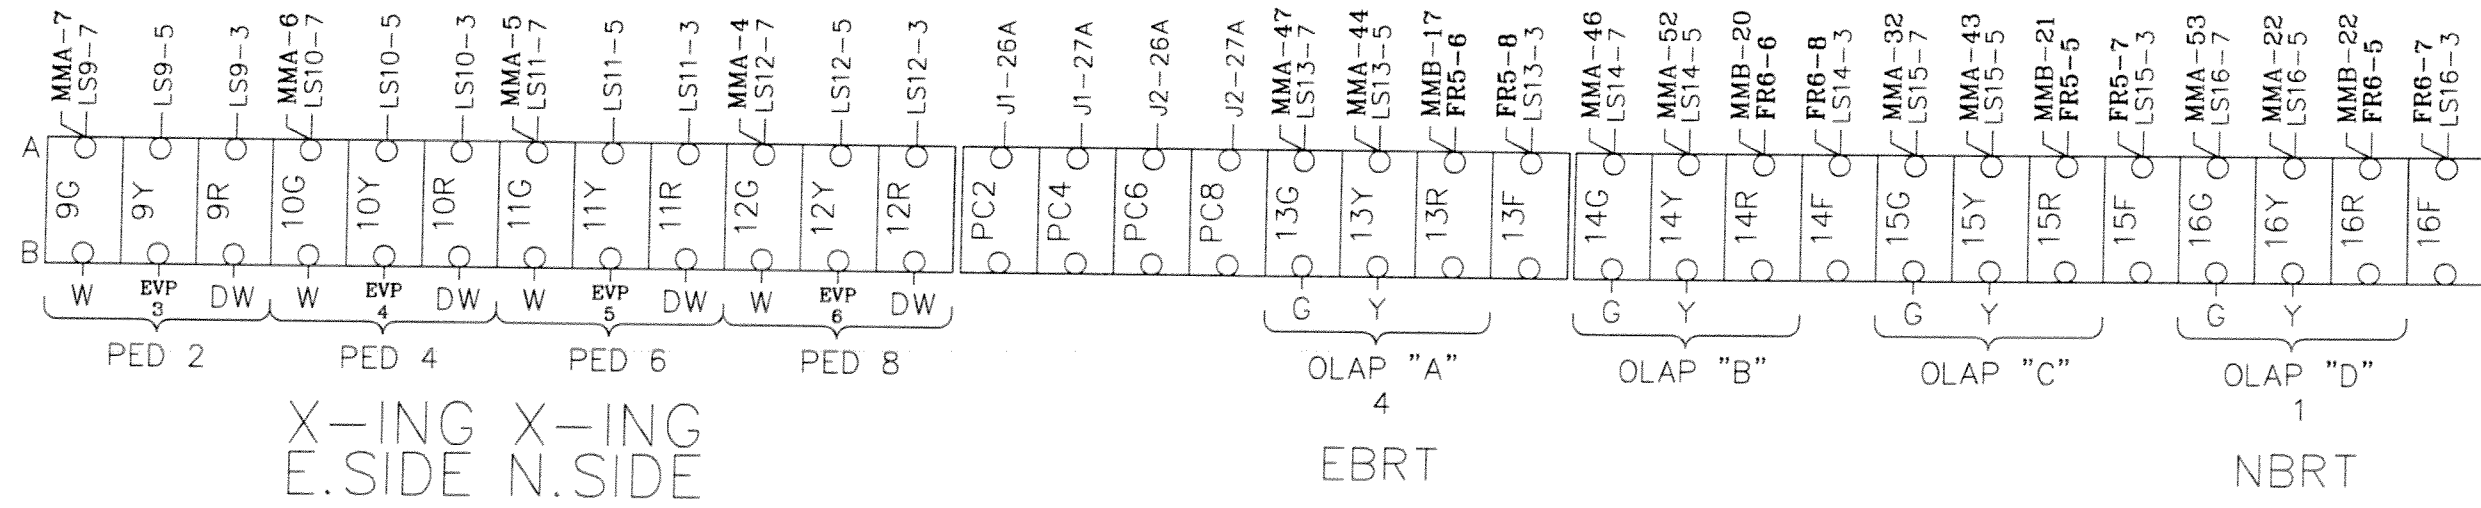

X-ING F.SIDE N.SIDE

EBRT

NBRT

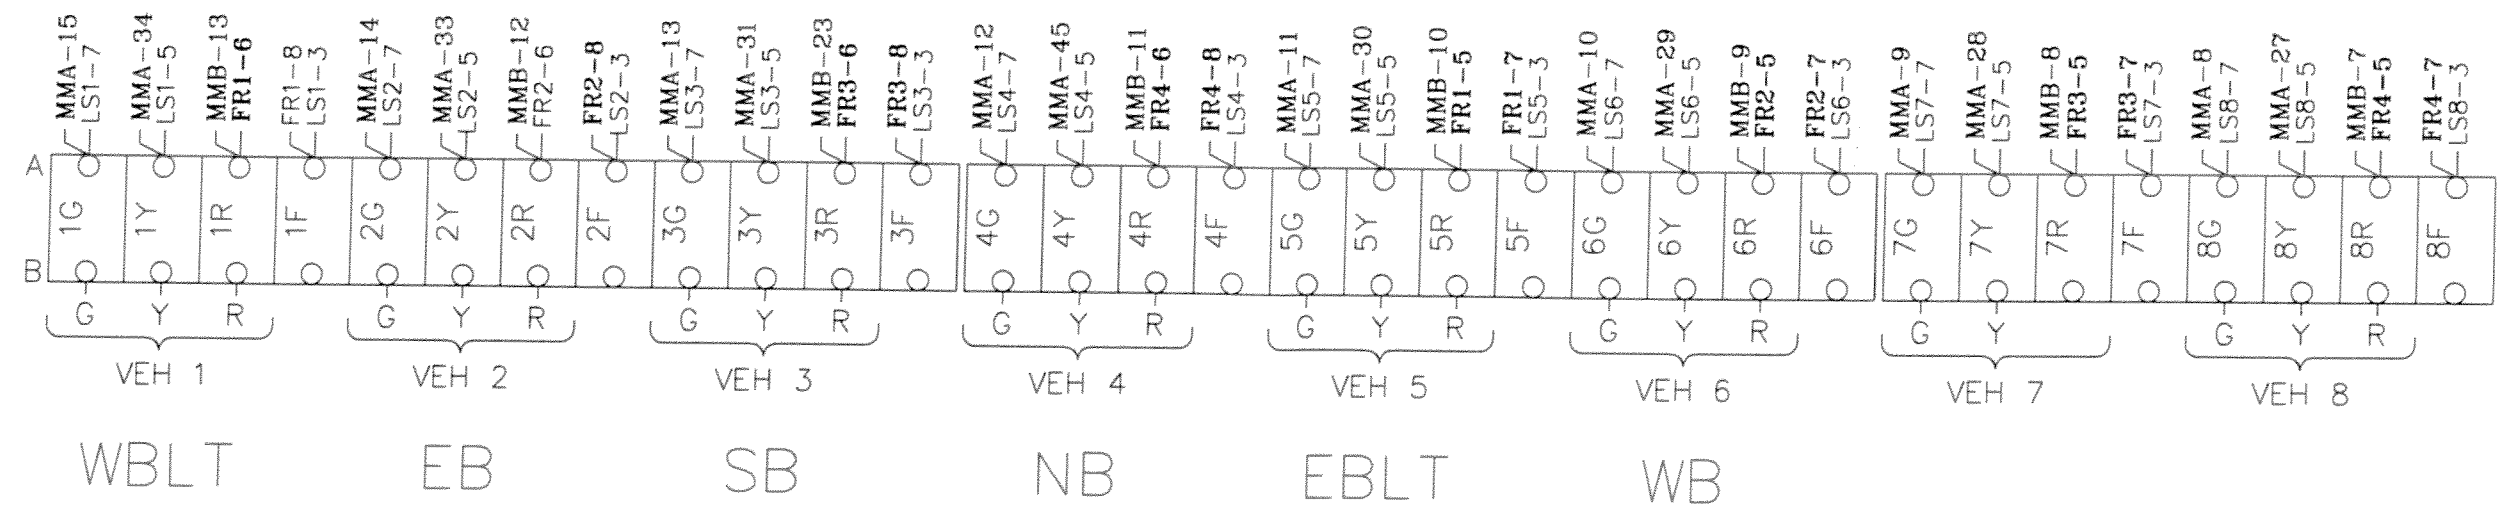

WBLT

EB




SB

NB

EBLT

WB



Ⓢ
2.2K
10W

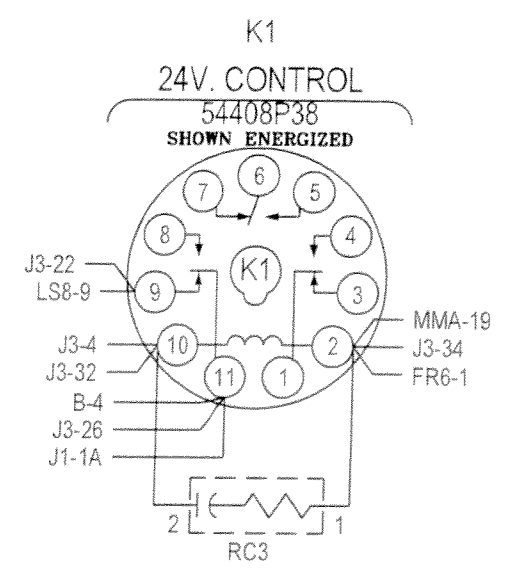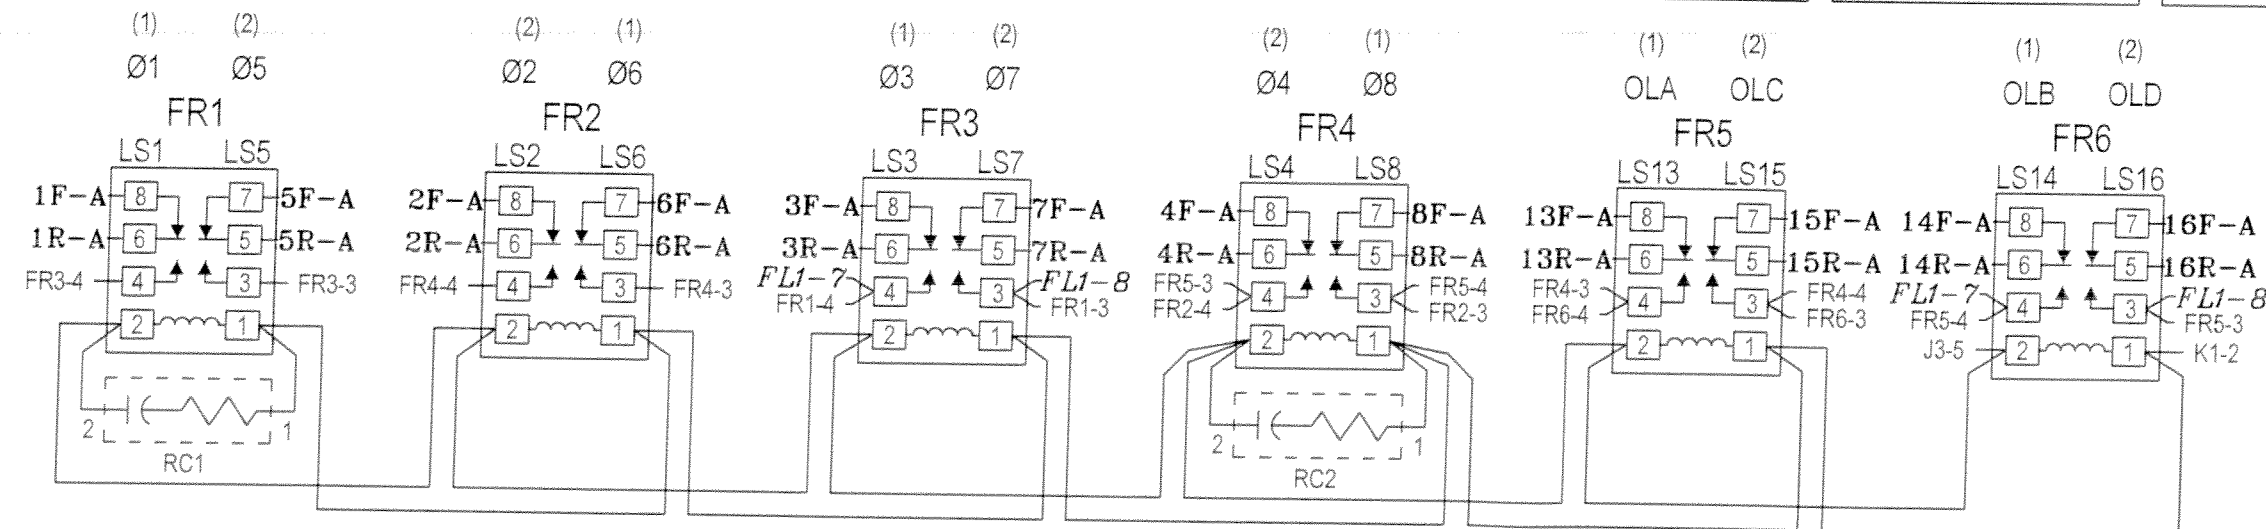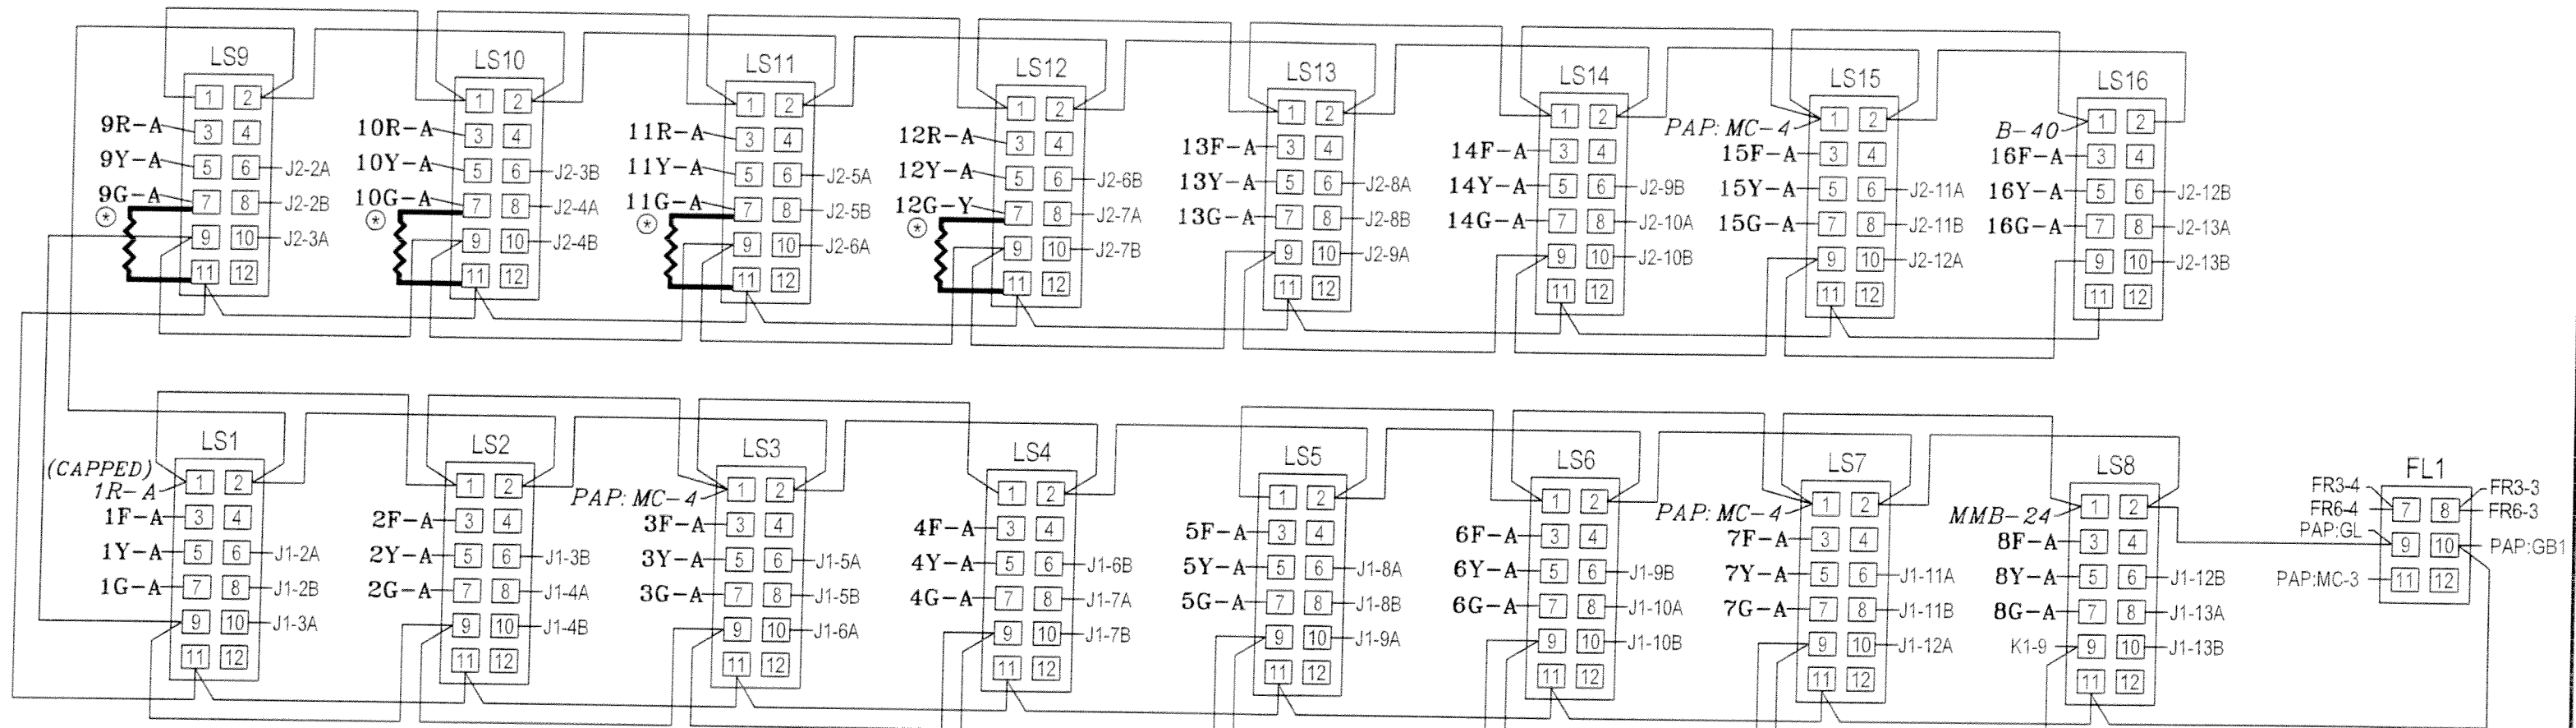

LOADBAY AND FLASH RELAYS

ALARM ASSIGNMENTS

OUTPUT	FUNCTION	TERMINATION
ALARM 1	DDDR OPEN	A33
ALARM 2	DN BATTERY	A34
ALARM 3	AC FAIL	A23
ALARM 4	UPS FAIL	A24

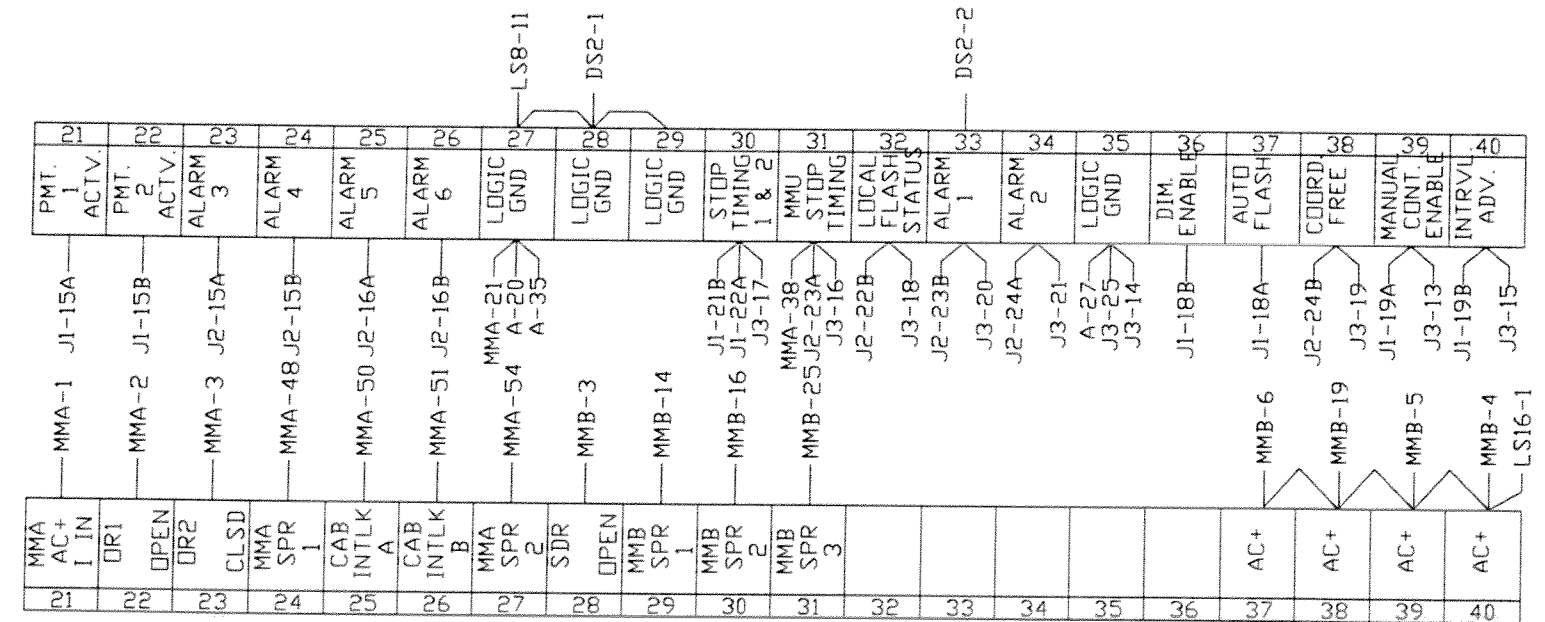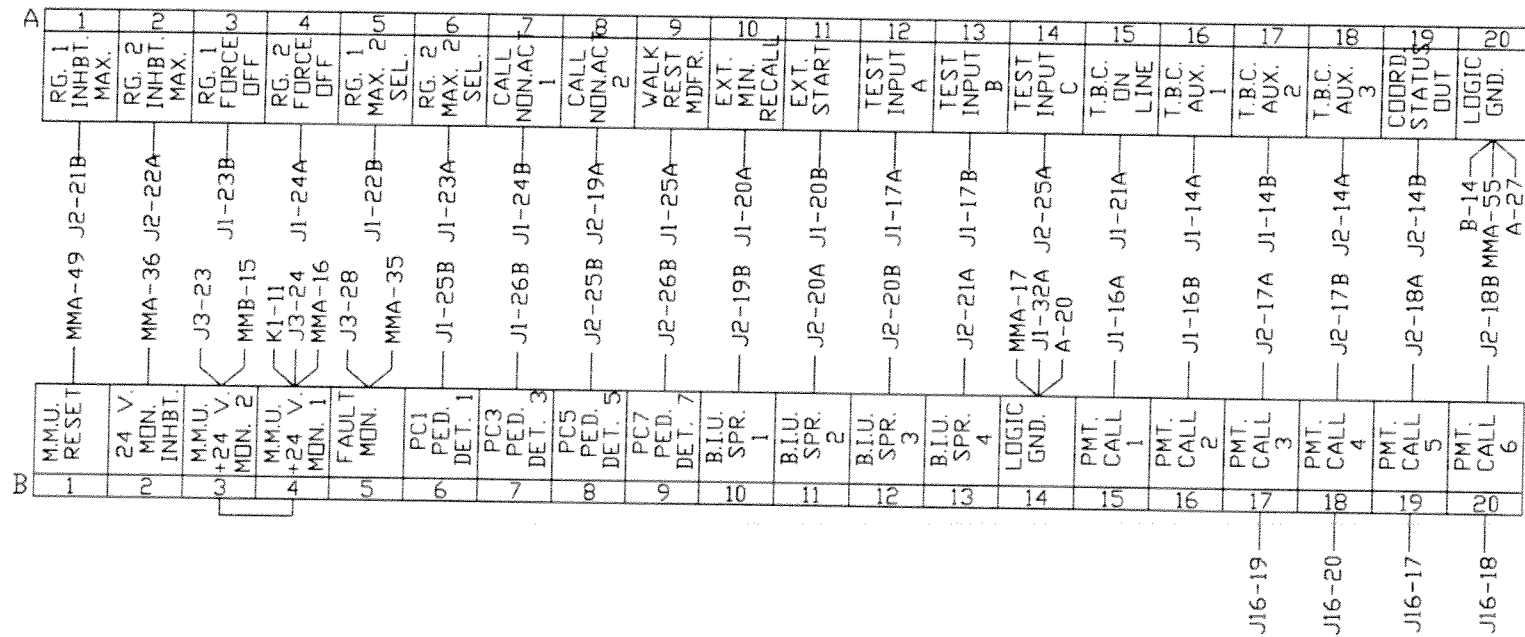

INTERFACE TERMINAL BLOCKS

BIU #1		
PIN	FUNCTION	TO
1A	+24 VDC	K1-11
1B	+24 VDC	J2-1B
2A	LS1 RED	LS1-6
2B	LS1 YELLOW	LS1-8
3A	LS1 GREEN	LS1-10
3B	LS2 RED	LS2-6
4A	LS2 YELLOW	LS2-8
4B	LS2 GREEN	LS2-10
5A	LS3 RED	LS3-6
5B	LS3 YELLOW	LS3-8
6A	LS3 GREEN	LS3-10
6B	LS4 RED	LS4-6
7A	LS4 YELLOW	LS4-8
7B	LS4 GREEN	LS4-10
8A	LS5 RED	LS5-6
8B	LS5 YELLOW	LS5-8
9A	LS5 GREEN	LS5-10
9B	LS6 RED	LS6-6
10A	LS6 YELLOW	LS6-8
10B	LS6 GREEN	LS6-10
11A	LS7 RED	LS7-6
11B	LS7 YELLOW	LS7-8
12A	LS7 GREEN	LS7-10
12B	LS8 RED	LS8-6
13A	LS8 YELLOW	LS8-8
13B	LS8 GREEN	LS8-10
14A	TBC AUX 1	A-16
14B	TBC AUX 2	A-17
15A	PMT ACT 1	A-21
15B	PMT ACT 2	A-22
16A	PMT CALL 1	B-15
16B	PMT CALL 2	B-16
17A	TEST A	A-12
17B	TEST B	A-13
18A	AUTO FLASH	A-37
18B	DIM. ENABLE	A-36
19A	MANUAL CONT.	A-39
19B	INT. ADVANCE	A-40
20A	EXT. MIN. RECAL	B-10
20B	EXT. START	A-11
21A	TBC ONLINE	A-15
21B	STOP TIME (1)	A-30
22A	STOP TIME (2)	A-30
22B	MAX. 2 (1)	A-5
23A	MAX. 2 (2)	A-6
23B	FORCE OFF (1)	A-3
24A	FORCE OFF (2)	A-4
24B	CNA 1	A-7
25A	WALK REST MOD	A-9
25B	PED. ISO. 1	B-6
26A	PED. ISO. 2	PC2-A
26B	PED. ISO. 3	B-7
27A	PED. ISO. 4	PC4-A
27B	PED. ISO. COMN.	J3-31
28A	ADDR. SEL. 0	-----
28B	ADDR. SEL. 1	-----
29A	ADDR. SEL. 2	-----
29B	ADDR. SEL. 3	-----
30A	RESERVED	-----
30B	RESERVED	-----
31A	EARTH GND.	LS12-2
31B	LINE FREQ. REF	J3-29
32A	LOGIC GND.	B-14
32B	LOGIC GND.	J2-32A

BIU #2		
PIN	FUNCTION	TO
1A	+24 VDC	J2-1B
1B	+24 VDC	J1-1B
2A	LS9 RED	LS9-6
2B	LS9 YELLOW	LS9-8
3A	LS9 GREEN	LS9-10
3B	LS10 RED	LS10-6
4A	LS10 YELLOW	LS10-8
4B	LS10 GREEN	LS10-10
5A	LS11 RED	LS11-6
5B	LS11 YELLOW	LS11-8
6A	LS11 GREEN	LS11-10
6B	LS12 RED	LS12-6
7A	LS12 YELLOW	LS12-8
7B	LS12 GREEN	LS12-10
8A	LS13 RED	LS13-6
8B	LS13 YELLOW	LS13-8
9A	LS13 GREEN	LS13-10
9B	LS14 RED	LS14-6
10A	LS14 YELLOW	LS14-8
10B	LS14 GREEN	LS14-10
11A	LS15 RED	LS15-6
11B	LS15 YELLOW	LS15-8
12A	LS15 GREEN	LS15-10
12B	LS16-RED	LS16-6
13A	LS16-YELLOW	LS16-8
13B	LS16-GREEN	LS16-10
14A	TBC AUX 3	A-18
14B	COORD. STATUS	A-19
15A	ALARM 3	A-23
15B	ALARM 4	A-24
16A	ALARM 5	A-25
16B	ALARM 6	A-26
17A	PMT CALL 3	B-17
17B	PMT CALL 4	B-18
18A	PMT CALL 5	B-19
18B	PMT CALL 6	B-20
19A	CNA 2	A-8
19B	SPARE 1	B-10
20A	SPARE 2	B-11
20B	SPARE 3	B-12
21A	SPARE 4	B-13
21B	INHIBIT MAX(1)	A-1
22A	INHIBIT MAX(2)	A-2
22B	LOCAL FLASH	A-32
23A	MMU FLASH	A-31
23B	ALARM 1	A-33
24A	ALARM 2	A-34
24B	COORD FREE IN	A-38
25A	TEST C	A-14
25B	PED. ISO. 5	B-8
26A	PED. ISO. 6	PC6-A
26B	PED. ISO. 7	B-9
27A	PED. ISO. 8	PC8-A
27B	PED. ISO. COMN.	J1-27B
28A	ADDR. SEL. 0	J2-32A
28B	ADDR. SEL. 1	-----
29A	ADDR. SEL. 2	-----
29B	ADDR. SEL. 3	-----
30A	RESERVED	-----
30B	RESERVED	-----
31A	EARTH GND.	J1-31A
31B	LINE FREQ. REF	J1-31B
32A	LOGIC GND.	J1-32B
32B	LOGIC GND.	J2-32A

MAIN PANEL CONTROL POWER C/C 34842G4	
PIN	FUNCTION
1	LOGIC GND
2	+24 VDC (IN)
3	-----
4	MMU FAULT MONITOR (IN)
5	LINE FREQ. REFERENCE (IN)
6	-----
7	+12 VAC (IN)
8	SIGNAL BUS CONTROL (IN)
9	-----
10	FILTERED AC NEUTRAL (IN)
11	CONT. EQUIP. AC LINE (OUT)
12	FILTERED AC LINE (IN)




CONTROLLER POWER (CCA2) C/C 34842G3			
WIRE	PIN	SIGNAL	TO
1	A	FAULT MONITOR	PB-4
2	U	AC NEUTRAL	PB-10
3	V	EARTH GROUND	PB-9
4	W	LOGIC GROUND	PB-1
5	P	AC LINE	PB-11
6	SHL	EARTH GROUND	CCA2-V

TYPE 1 CONTROLLER POWER C/C 34842G2		
PIN	FUNCTION	TO
A	AC NEUTRAL	PB-10
B	-----	-----
C	AC LINE	PB-11
D	+12 VDC	PB-3
E	+24 VDC	PB-2
F	RESERVED	-----
G	LOGIC GND.	PB-1
H	EARTH GND.	PB-9
I	+12 VAC	PB-7
J	RESERVED	-----
SHL	EARTH GND.	PIN H

CABINET POWER SUPPLY C/C 34842G1		
PIN	FUNCTION	TO
A	AC NEUTRAL	PB-10
B	LINE FREQUENCY REF.	PB-5
C	AC LINE	PB-11
D	+12 VDC	PB-3
E	+24 VDC	PB-2
F	RESERVED	-----
G	LOGIC GND.	PB-1
H	EARTH GND.	PB-9
I	+12 VAC	PB-7
J	RESERVED	-----
SHL	EARTH GND.	PIN H

CONTROLLER PORT 1 CONNECTOR			
PIN	SIGNAL	TO	FUNCTION
1	TWISTED PAIR 1+	SDLC-1	CONT TXD+
2	LOGIC GND.	-----	-----
3	TWISTED PAIR 2+	SDLC-4	CONT TXC+
4	LOGIC GND.	-----	-----
5	TWISTED PAIR 3+	SDLC-7	CONT RXD+
6	LOGIC GND.	-----	-----
7	TWISTED PAIR 4+	SDLC-10	CONT RXC+
8	LOGIC GND.	-----	-----
9	TWISTED PAIR 1-	SDLC-2	CONT TXD-
10	PORT 1 DISABLE	-----	-----
11	TWISTED PAIR 2-	SDLC-5	CONT TXC-
12	EARTH GND.	SHIELD WIRE	-----
13	TWISTED PAIR 3-	SDLC-8	CONT RXD-
14	RESERVED	-----	-----
15	TWISTED PAIR 4-	SDLC-11	CONT RXC-

MMU & BIU PORT 1 CONNECTOR			
PIN	SIGNAL	TO	FUNCTION
1	TWISTED PAIR 1+	SDLC-1	BIU RXD+
2	LOGIC GND.	-----	-----
3	TWISTED PAIR 2+	SDLC-4	BIU RXC+
4	LOGIC GND.	-----	-----
5	TWISTED PAIR 3+	SDLC-7	BIU TXD+
6	LOGIC GND.	-----	-----
7	TWISTED PAIR 4+	SDLC-10	BIU TXC+
8	LOGIC GND.	-----	-----
9	TWISTED PAIR 1-	SDLC-2	BIU RXD-
10	PORT 1 DISABLE	-----	-----
11	TWISTED PAIR 2-	SDLC-5	BIU RXC-
12	EARTH GND.	SHIELD WIRE	-----
13	TWISTED PAIR 3-	SDLC-8	BIU TXD-
14	RESERVED	-----	-----
15	TWISTED PAIR 4-	SDLC-11	BIU TXC-

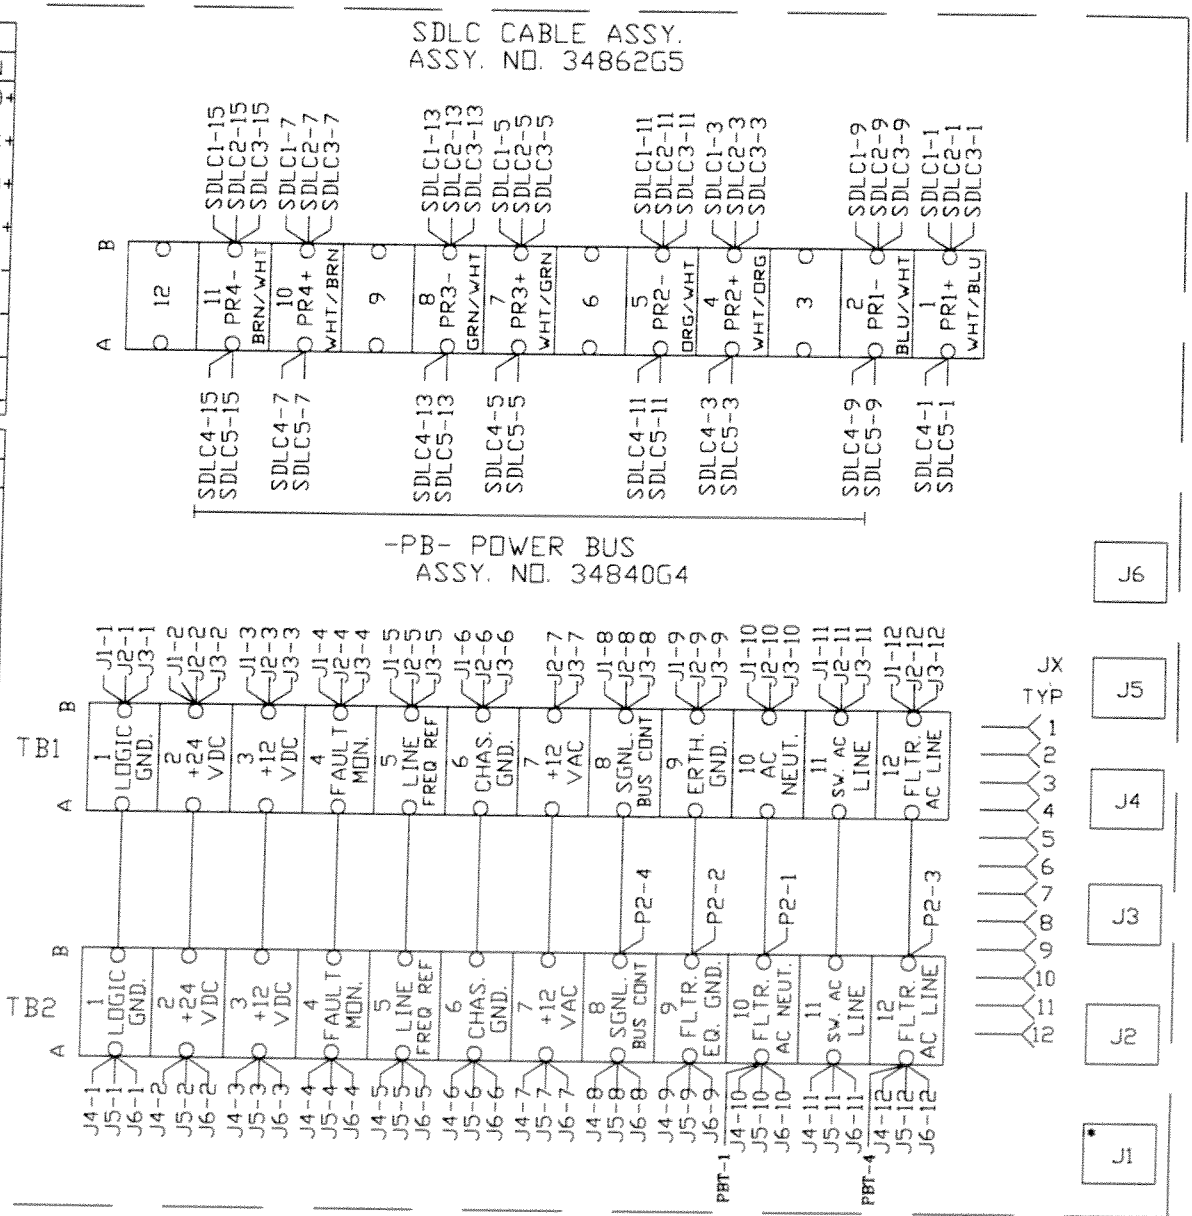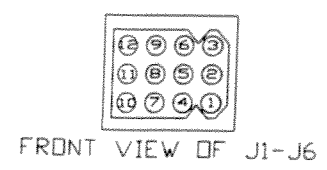


BIU AND CONNECTING CABLES

WIRE LIST FOR NEMA MALFUNCTION MANAGEMENT UNIT


CONNECTOR "A" (MMA)					CONNECTOR "B" (MMB)																																																				
PIN	WIRE	MON. FUNCTION	TO	SIG. FUNCTION	PIN	WIRE	MON. FUNCTION	TO	SIG. FUNCTION																																																
A	A-1	AC+ I INPUT	B21		A	B-1	AC+ II INPUT	J3-2	MMU POWER																																																
B	A-2	OUT RLY 1 OPEN	B22		B	B-2	S. DLY RLY COMM.	J3-6	MMU POWER																																																
C	A-3	OUT RLY 2 CLSD	B23		C	B-3	S. DLY RLY OPEN	B28																																																	
D	A-4	CH. 12 GREEN	12G-A	^8 WLK	D	B-4	CH. 12 RED	B40																																																	
E	A-5	CH. 11 GREEN	11G-A	^6 WLK	E	B-5	CH. 11 RED	B39																																																	
F	A-6	CH. 10 GREEN	10G-A	^4 WLK	F	B-6	CH. 9 RED	B37																																																	
G	A-7	CH. 9 GREEN	9G-A	^2 WLK	G	B-7	CH. 8 RED	8R-A	^8 RED																																																
H	A-8	CH. 8 GREEN	8G-A	^8 GRN	H	B-8	CH. 7 RED	7R-A	^7 RED																																																
J	A-9	CH. 7 GREEN	7G-A	^7 GRN	J	B-9	CH. 6 RED	6R-A	^6 RED																																																
K	A-10	CH. 6 GREEN	6G-A	^6 GRN	K	B-10	CH. 5 RED	5R-A	^5 RED																																																
L	A-11	CH. 5 GREEN	5G-A	^5 GRN	L	B-11	CH. 4 RED	4R-A	^4 RED																																																
M	A-12	CH. 4 GREEN	4G-A	^4 GRN	M	B-12	CH. 2 RED	2R-A	^2 RED																																																
N	A-13	CH. 3 GREEN	3G-A	^3 GRN	N	B-13	CH. 1 RED	1R-A	^1 RED																																																
P	A-14	CH. 2 GREEN	2G-A	^2 GRN	P	B-14	(SPARE 1)	B29																																																	
R	A-15	CH. 1 GREEN	1G-A	^1 GRN	R	B-15	+24V MONITOR II	B-3	+24V MON. II																																																
S	A-16	+24V MON. I	B-4	LS +24V MON.	S	B-16	(SPARE 2)	B30																																																	
T	A-17	LOGIC GND	B-14	LOGIC GND	T	B-17	CH. 13 RED	13R-A	OLA RED																																																
U	A-18	CHASSIS GND	LS7-2	EARTH GND.	U	B-18	S. DLY RLY CLSD	J3-35	CONT. POWER																																																
V	A-19	AC- (COMMON)	K1-2	AC NEUTRAL	V	B-19	CH. 10 RED	B38																																																	
W	A-20	OUT RLY 1 COM.	J3-7	SIG BUS CONT	W	B-20	CH. 14 RED	14R-A	OLB RED																																																
X	A-21	OUT RLY 2 COM.	A-27	LOGIC GND	X	B-21	CH. 15 RED	15R-A	OLC RED																																																
Y	A-22	CH. 12 YELLOW	-T-		Y	B-22	CH. 16 RED	16R-A	OLD RED																																																
Z	A-23	CH. 11 YELLOW	-T-		Z	B-23	CH. 3 RED	3R-A	^3 RED																																																
a	A-24	CH. 10 WALK	---		a	B-24	RED ENABLE	LS8-1	SIG BUS CON.																																																
b	A-25	CH. 10 YELLOW	-T-		b	B-25	(SPARE 3)	B31																																																	
c	A-26	CH. 9 YELLOW	-T-		c	B-26	LOCAL FLASH IN	CAPPED	POL/AX FLSH																																																
d	A-27	CH. 8 YELLOW	8Y-A	^8 YEL	B-27	SHELL GROUND	LS6-2	---	EARTH GND.																																																
e	A-28	CH. 7 YELLOW	7Y-A	^7 YEL	<p style="text-align: center;">NOTES FOR 16 CHANNEL M.M.U.</p> <p>(1) RELAY CONTACT POSITIONS SPECIFIED ARE FOR NON-CONFLICT MODE.</p> <p>(2) TO PROGRAM MMU, SOLDER JUMPERS IN PROGRAMMING CARD FOR ALL PERMISSABLE PHASE MOVEMENTS, MINIMUM CHANGE DISABLE FOR ALL PEDESTRIAN CHANNELS, AND MIN. FLASH, VOLTAGE MON., AND 24V. MON. LATCH OPTIONS AS DESIRED.</p> <p style="text-align: center;">M.M.U. CHANNEL ASSIGNMENTS</p> <table style="width: 100%; border-collapse: collapse;"> <tr> <td>CH. 1 =</td> <td>L/S 1 =</td> <td>^1 VEH.</td> </tr> <tr> <td>CH. 2 =</td> <td>L/S 2 =</td> <td>^2 VEH.</td> </tr> <tr> <td>CH. 3 =</td> <td>L/S 3 =</td> <td>^3 VEH.</td> </tr> <tr> <td>CH. 4 =</td> <td>L/S 4 =</td> <td>^4 VEH.</td> </tr> <tr> <td>CH. 5 =</td> <td>L/S 5 =</td> <td>^5 VEH.</td> </tr> <tr> <td>CH. 6 =</td> <td>L/S 6 =</td> <td>^6 VEH.</td> </tr> <tr> <td>CH. 7 =</td> <td>L/S 7 =</td> <td>^7 VEH.</td> </tr> <tr> <td>CH. 8 =</td> <td>L/S 8 =</td> <td>^8 VEH.</td> </tr> <tr> <td>CH. 9 =</td> <td>L/S 9 =</td> <td>^2 PED.</td> </tr> <tr> <td>CH. 10 =</td> <td>L/S 10 =</td> <td>^4 PED.</td> </tr> <tr> <td>CH. 11 =</td> <td>L/S 11 =</td> <td>^6 PED.</td> </tr> <tr> <td>CH. 12 =</td> <td>L/S 12 =</td> <td>^8 PED.</td> </tr> <tr> <td>CH. 13 =</td> <td>L/S 13 =</td> <td>OLAP A</td> </tr> <tr> <td>CH. 14 =</td> <td>L/S 14 =</td> <td>OLAP B</td> </tr> <tr> <td>CH. 15 =</td> <td>L/S 15 =</td> <td>OLAP C</td> </tr> <tr> <td>CH. 16 =</td> <td>L/S 16 =</td> <td>OLAP D</td> </tr> </table>					CH. 1 =	L/S 1 =	^1 VEH.	CH. 2 =	L/S 2 =	^2 VEH.	CH. 3 =	L/S 3 =	^3 VEH.	CH. 4 =	L/S 4 =	^4 VEH.	CH. 5 =	L/S 5 =	^5 VEH.	CH. 6 =	L/S 6 =	^6 VEH.	CH. 7 =	L/S 7 =	^7 VEH.	CH. 8 =	L/S 8 =	^8 VEH.	CH. 9 =	L/S 9 =	^2 PED.	CH. 10 =	L/S 10 =	^4 PED.	CH. 11 =	L/S 11 =	^6 PED.	CH. 12 =	L/S 12 =	^8 PED.	CH. 13 =	L/S 13 =	OLAP A	CH. 14 =	L/S 14 =	OLAP B	CH. 15 =	L/S 15 =	OLAP C	CH. 16 =	L/S 16 =	OLAP D
CH. 1 =	L/S 1 =	^1 VEH.																																																							
CH. 2 =	L/S 2 =	^2 VEH.																																																							
CH. 3 =	L/S 3 =	^3 VEH.																																																							
CH. 4 =	L/S 4 =	^4 VEH.																																																							
CH. 5 =	L/S 5 =	^5 VEH.																																																							
CH. 6 =	L/S 6 =	^6 VEH.																																																							
CH. 7 =	L/S 7 =	^7 VEH.																																																							
CH. 8 =	L/S 8 =	^8 VEH.																																																							
CH. 9 =	L/S 9 =	^2 PED.																																																							
CH. 10 =	L/S 10 =	^4 PED.																																																							
CH. 11 =	L/S 11 =	^6 PED.																																																							
CH. 12 =	L/S 12 =	^8 PED.																																																							
CH. 13 =	L/S 13 =	OLAP A																																																							
CH. 14 =	L/S 14 =	OLAP B																																																							
CH. 15 =	L/S 15 =	OLAP C																																																							
CH. 16 =	L/S 16 =	OLAP D																																																							
f	A-29	CH. 6 YELLOW	6Y-A	^6 YEL																																																					
g	A-30	CH. 5 YELLOW	5Y-A	^5 YEL																																																					
h	A-31	CH. 3 YELLOW	3Y-A	^3 YEL																																																					
i	A-32	CH. 15 GREEN	15G-A	OLC GRN																																																					
j	A-33	CH. 2 YELLOW	2Y-A	^2 YEL																																																					
k	A-34	CH. 1 YELLOW	1Y-A	^1 YEL																																																					
m	A-35	CONT. VOLT. MON.	B-5	VOLT. MON.																																																					
n	A-36	+24V MON. INH.	B-2																																																						
p	A-37	OUT RLY 1 CLSD	J3-3																																																						
q	A-38	OUT RLY 2 OPEN	A-31	STOP TIME																																																					
r	A-39	CH. 12 WALK	---																																																						
s	A-40	CH. 11 WALK	---																																																						
t	A-41	CH. 9 WALK	---																																																						
u	A-42	CH. 16 YELLOW	16Y-A	OLD YEL																																																					
v	A-43	CH. 15 YELLOW	15Y-A	OLC YEL																																																					
w	A-44	CH. 13 YELLOW	13Y-A	OLA YEL																																																					
x	A-45	CH. 4 YELLOW	4Y-A	^4 YEL																																																					
y	A-46	CH. 14 GREEN	14G-A	OLB GRN																																																					
z	A-47	CH. 13 GREEN	13G-A	OLA GRN																																																					
AA	A-48	(SPARE 1)	B24																																																						
BB	A-49	RESET	B-1																																																						
CC	A-50	CAB. INTLK A	B25																																																						
DD	A-51	CAB. INTLK B	B26																																																						
EE	A-52	CH. 14 YELLOW	14Y-A	OLB YRL																																																					
FF	A-53	CH. 16 GREEN	16G-A	OLD GRN																																																					
GG	A-54	(SPARE 2)	B27																																																						
HH	A-55	TYPE SELECT	A-20	MMU/CMU SEL.																																																					
	A-56	SHELL GND	LS15-2	EARTH GND.																																																					

MMU PROGRAM CARD

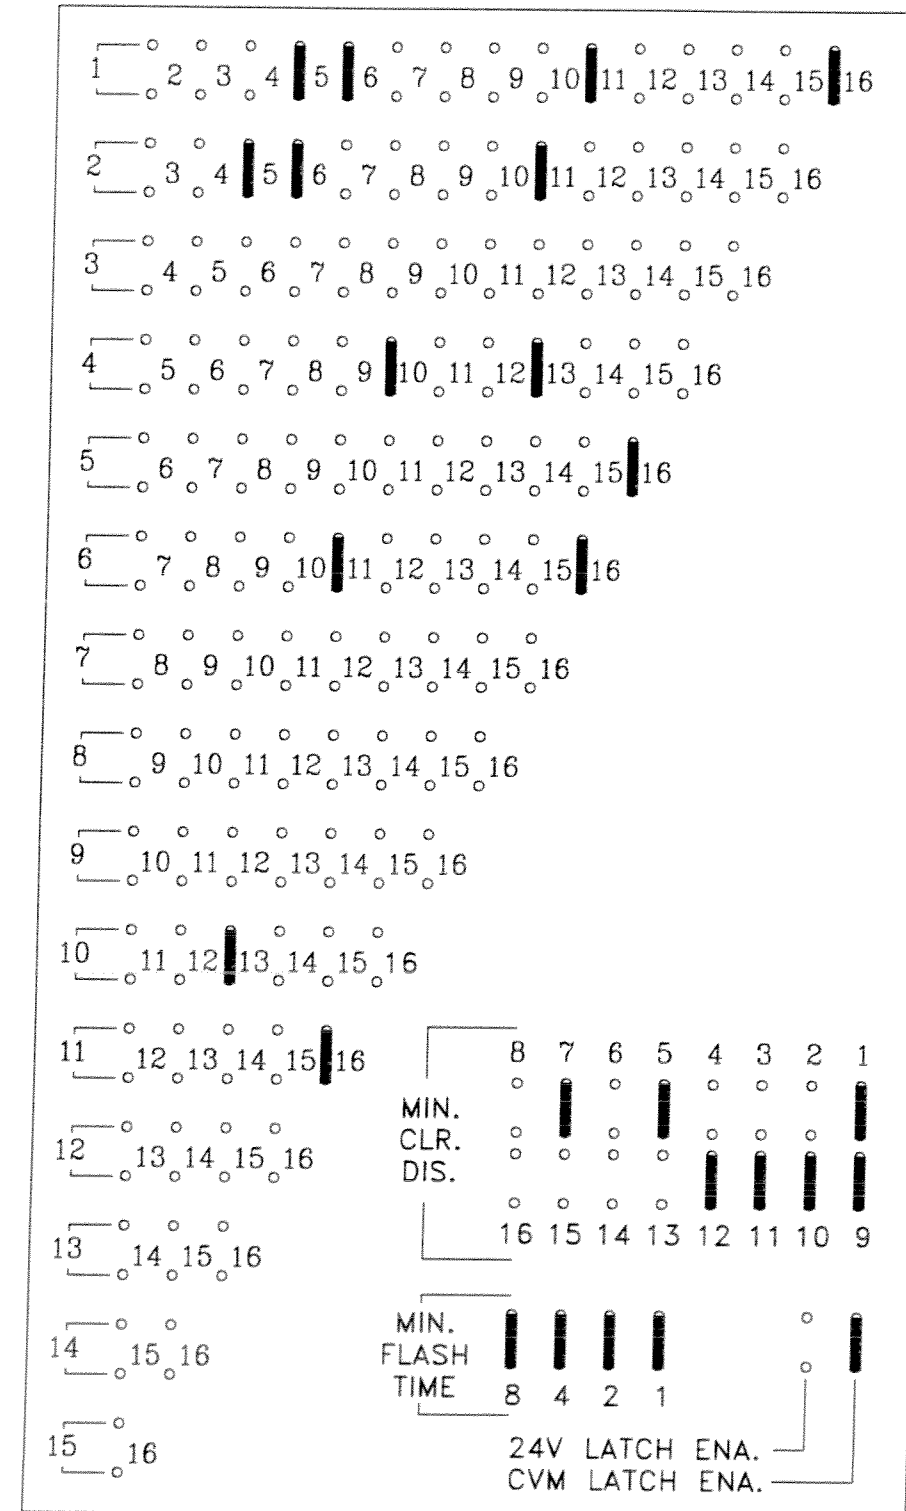

M.M.U. C/C'S AND PROGRAM CARD


DETECTOR RACK 34030G1

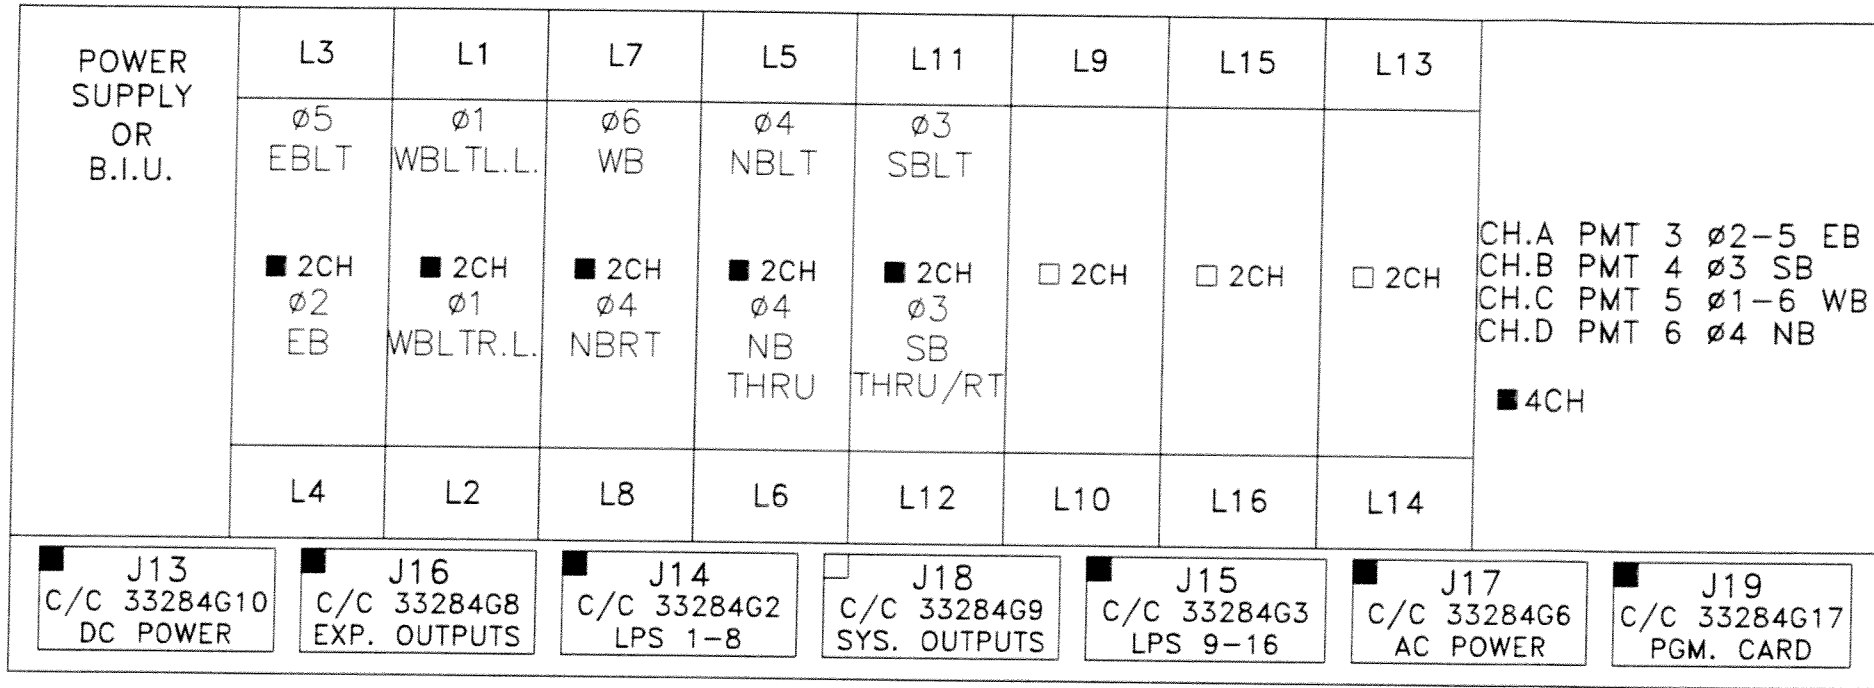

①


ADDRESS TABLE					
RACK #	JMPR	DET. #'S	RACK #	JMPR	DET. #'S
1	⊖⊖⊖	1-16	5	⊖⊖⊖	65-80
2	⊖⊖⊖	17-32	6	⊖⊖⊖	81-96
3	⊖⊖⊖	33-48	7	⊖⊖⊖	97-112
4	⊖⊖⊖	49-64	8	⊖⊖⊖	113-128

DETECTOR ASSIGNMENTS		
CONT. INPUT	PHASE ASGN.	DETECTOR TYPE
1	1	0
2	1	0
3	5	0
4	2	0
5	4	0
6	4	0
7	6	0
8	4	0
9		
10		
11	3	0
12	3	0
13		
14		
15		
16		

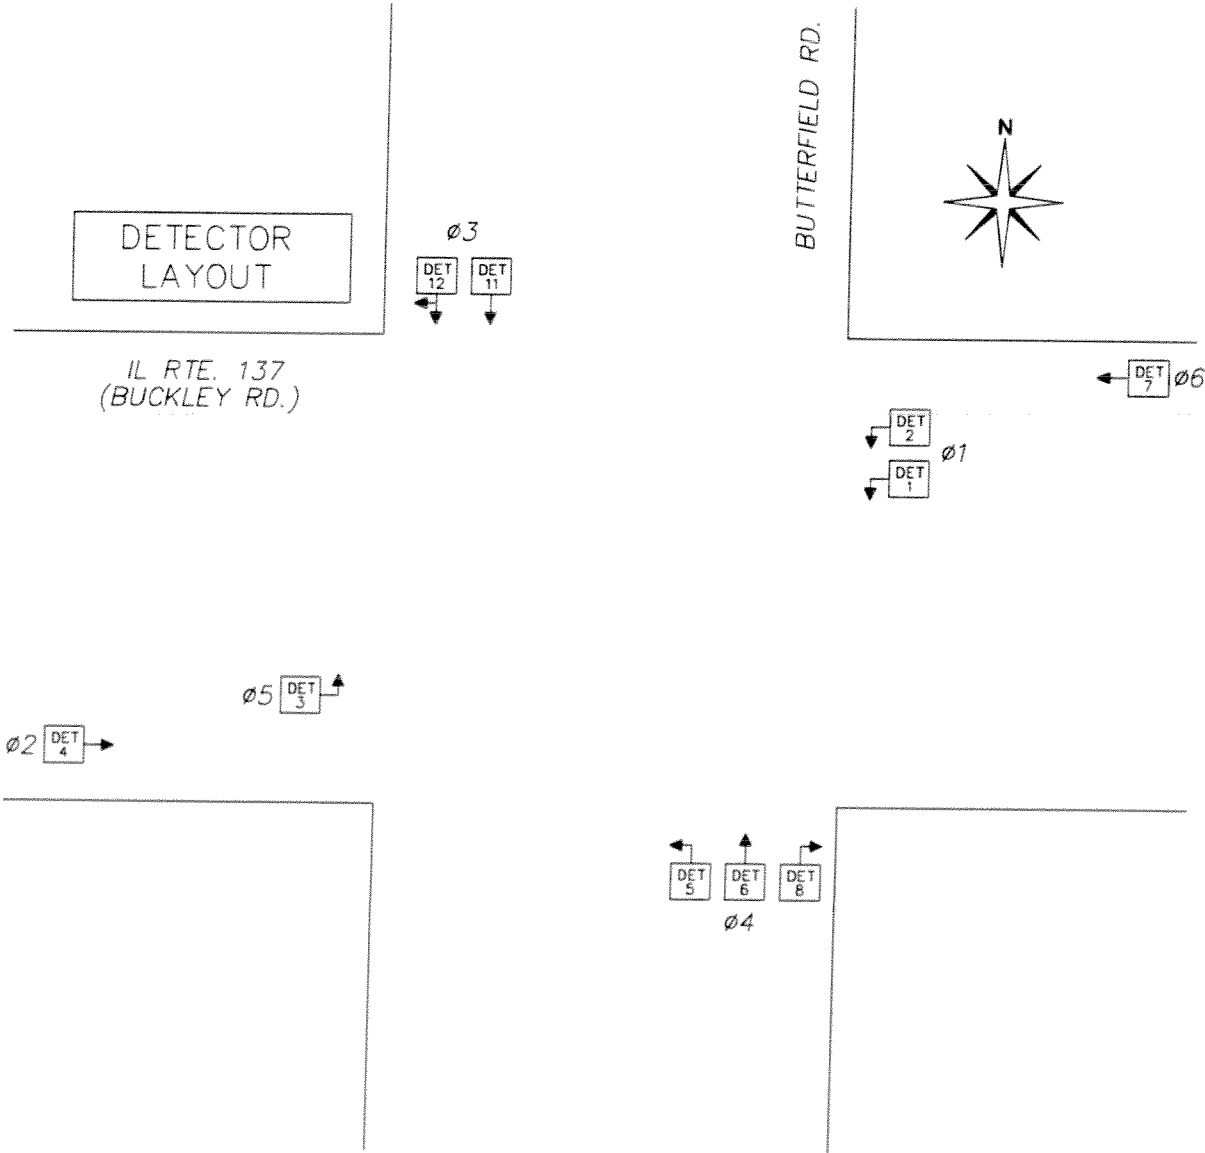

DETECTOR RACK PROGRAMMING JUMPERS																												
DET. TYPE	JP1	JP2	SLOT 1/2 ①					SLOT 3/4 ①					SLOT 5/6 ①					SLOT 7/8 ①										
			JP3	JP4	JP5	JP6	JP7	JP8	JP9	JP10	JP11	JP12	JP13	JP14	JP15	JP16	JP17	JP18	JP19	JP20	JP21	JP22	JP23	JP24	JP25	JP26	JP27	JP28
① TS-1	NO	NO	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖
② TS-2	YES	YES	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖
③ LM-632T 262-FC	NO	NO	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖
④ MAG.	NO	NO	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖

DETECTOR LOOP
INTERFACE
ASSY. 34040G1

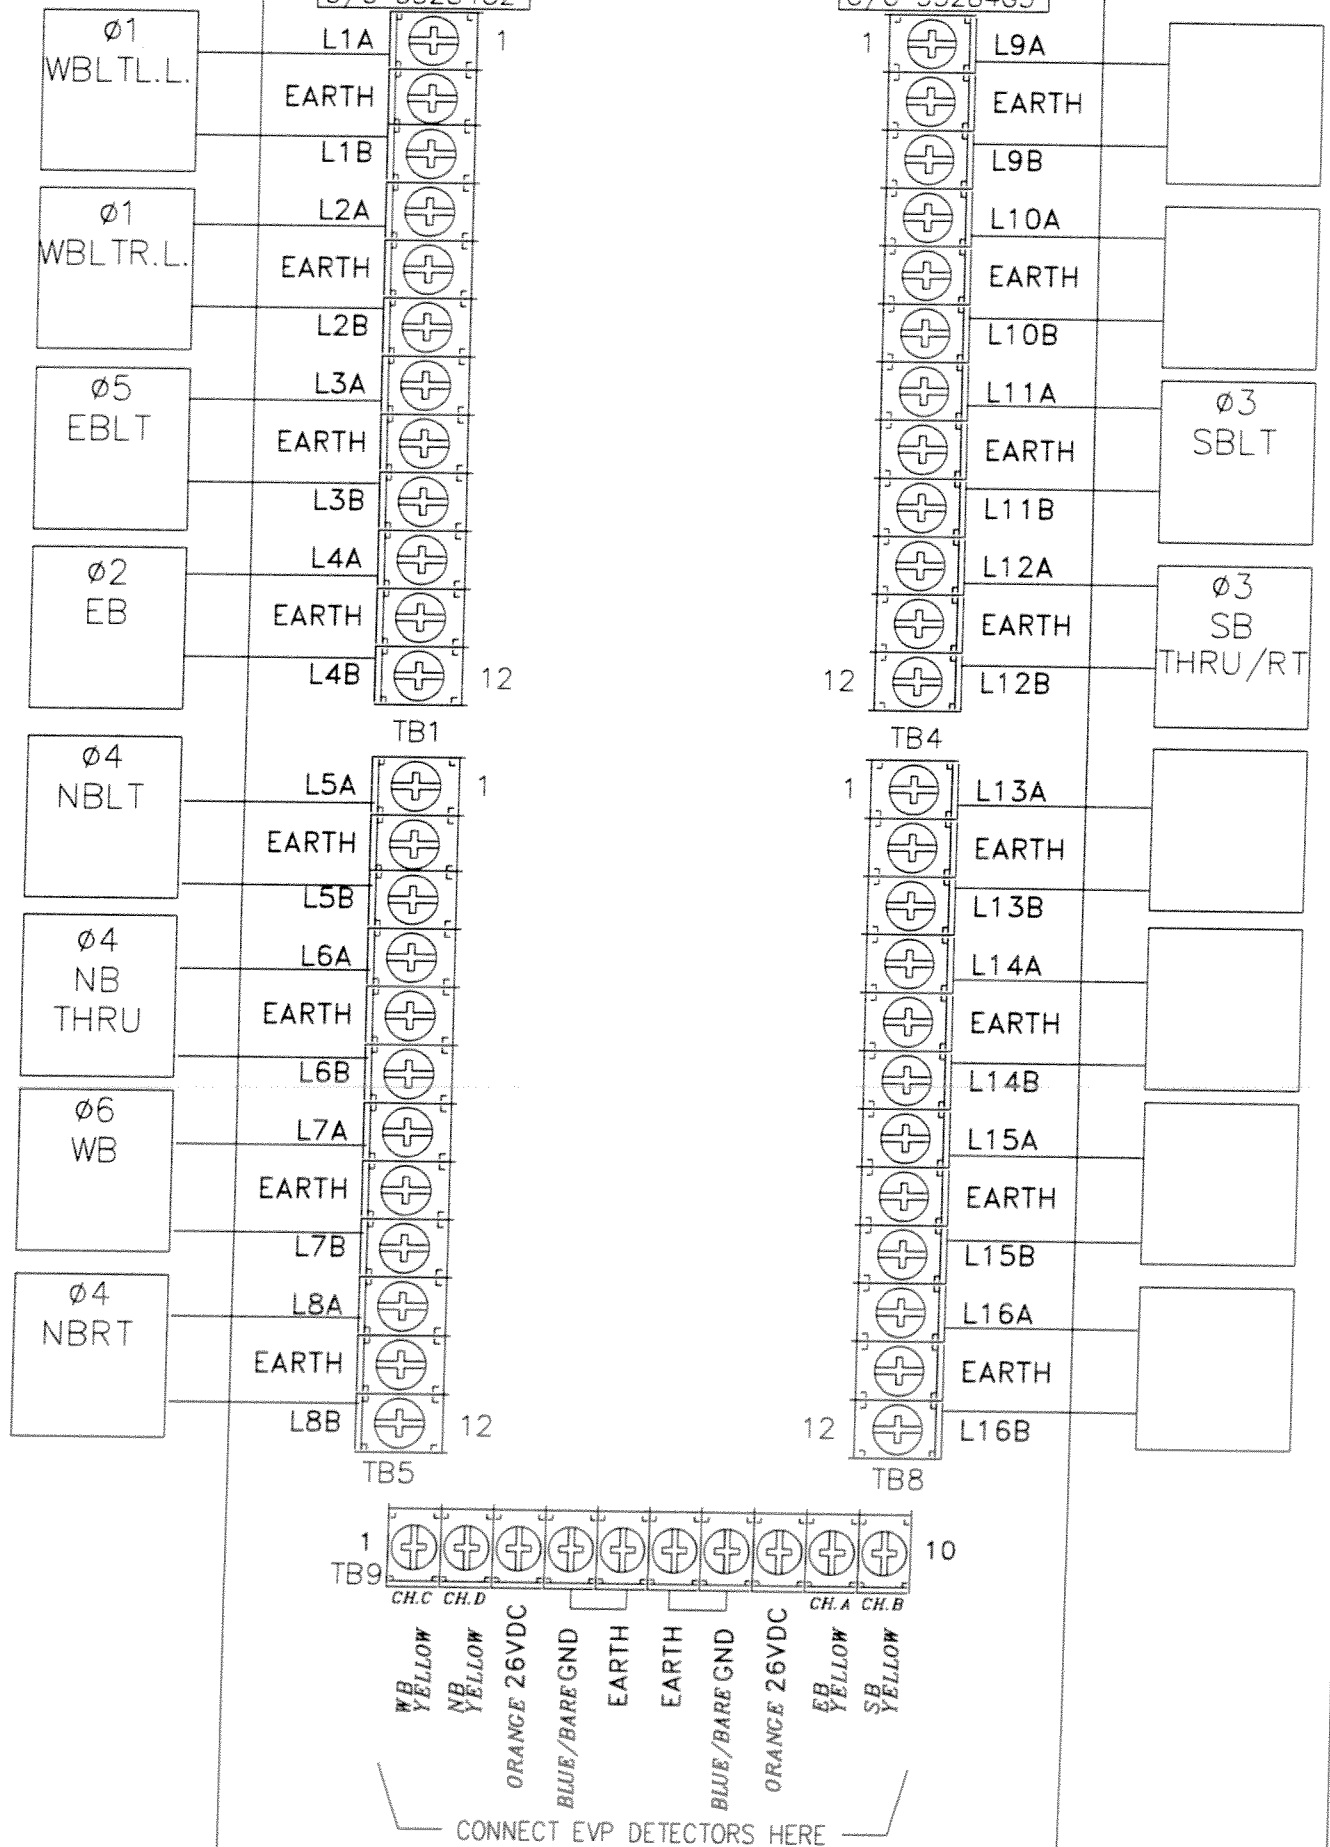

DET. LOOPS 9-16 (J15) C/C 33284G3

PIN	SIGNAL	TO
1	LOOP 9+	LPI2: TB4-1
2	LOOP 9-	LPI2: TB4-3
3	LOOP 10+	LPI2: TB4-4
4	LOOP 10-	LPI2: TB4-6
5	LOOP 11+	LPI2: TB4-7
6	LOOP 11-	LPI2: TB4-9
7	LOOP 12+	LPI2: TB4-10
8	LOOP 12-	LPI2: TB4-12
9	LOOP 13+	LPI2: TB8-1
10	LOOP 13-	LPI2: TB8-3
11	LOOP 14+	LPI2: TB8-4
12	LOOP 14-	LPI2: TB8-6
13	LOOP 15+	LPI2: TB8-7
14	LOOP 15-	LPI2: TB8-9
15	LOOP 16+	LPI2: TB8-10
16	LOOP 16-	LPI2: TB8-12
17	----	
18	----	
19	----	
20	----	

DET. LOOPS 1-8 (J14) C/C 33284G2

PIN	SIGNAL	TO
1	LOOP 1+	LPI1: TB1-1
2	LOOP 1-	LPI1: TB1-3
3	LOOP 2+	LPI1: TB1-4
4	LOOP 2-	LPI1: TB1-6
5	LOOP 3+	LPI1: TB1-7
6	LOOP 3-	LPI1: TB1-9
7	LOOP 4+	LPI1: TB1-10
8	LOOP 4-	LPI1: TB1-12
9	LOOP 5+	LPI1: TB5-1
10	LOOP 5-	LPI1: TB5-3
11	LOOP 6+	LPI1: TB5-4
12	LOOP 6-	LPI1: TB5-6
13	LOOP 7+	LPI1: TB5-7
14	LOOP 7-	LPI1: TB5-9
15	LOOP 8+	LPI1: TB5-10
16	LOOP 8-	LPI1: TB5-12
17	PMT. DET. CH. C	LPI1: TB9-1
18	PMT. DET. CH. D	LPI1: TB9-2
19	KEY PIN	
20	PMT. CH. C/D +26VDC	LPI1: TB9-3
21	PMT. DC GROUND	LPI1: TB9-4,7
22	PMT. CH. A/B +26VDC	LPI1: TB9-8
23	PMT. DET. CH. A	LPI1: TB9-9
24	PMT. DET. CH. B	LPI1: TB9-10
25	----	
26	----	

DET. RACK POWER
C/C 34842G5


P1/ DR: J13	P2/ DR: J17	FUNCTION	TO
1		+12 VDC (DET. POWER)	PB-3
2		+24 VDC (BIU POWER)	PB-2
3		LOGIC GROUND	PB-1
4		EARTH GROUND	PB-9
5		"KEY PIN"	
6		LINE FREQUENCY REF.	PB-5
	1	EARTH GROUND	----
	2	AC LINE	PB-12
	3	AC NEUTRAL	PB-10
	4	LOGIC GROUND	----

EXPANSION OUTPUTS
C/C 33284G8


J16	FUNCTION	TO
17	DET. 17 / PMT. A OUT	MP: B19
18	DET. 18 / PMT. B OUT	MP: B20
19	PMT. C OUT	MP: B17
20	PMT. D OUT	MP: B18

DETECTOR LOOP INTERFACE


PTZ FIELD TERMINALS

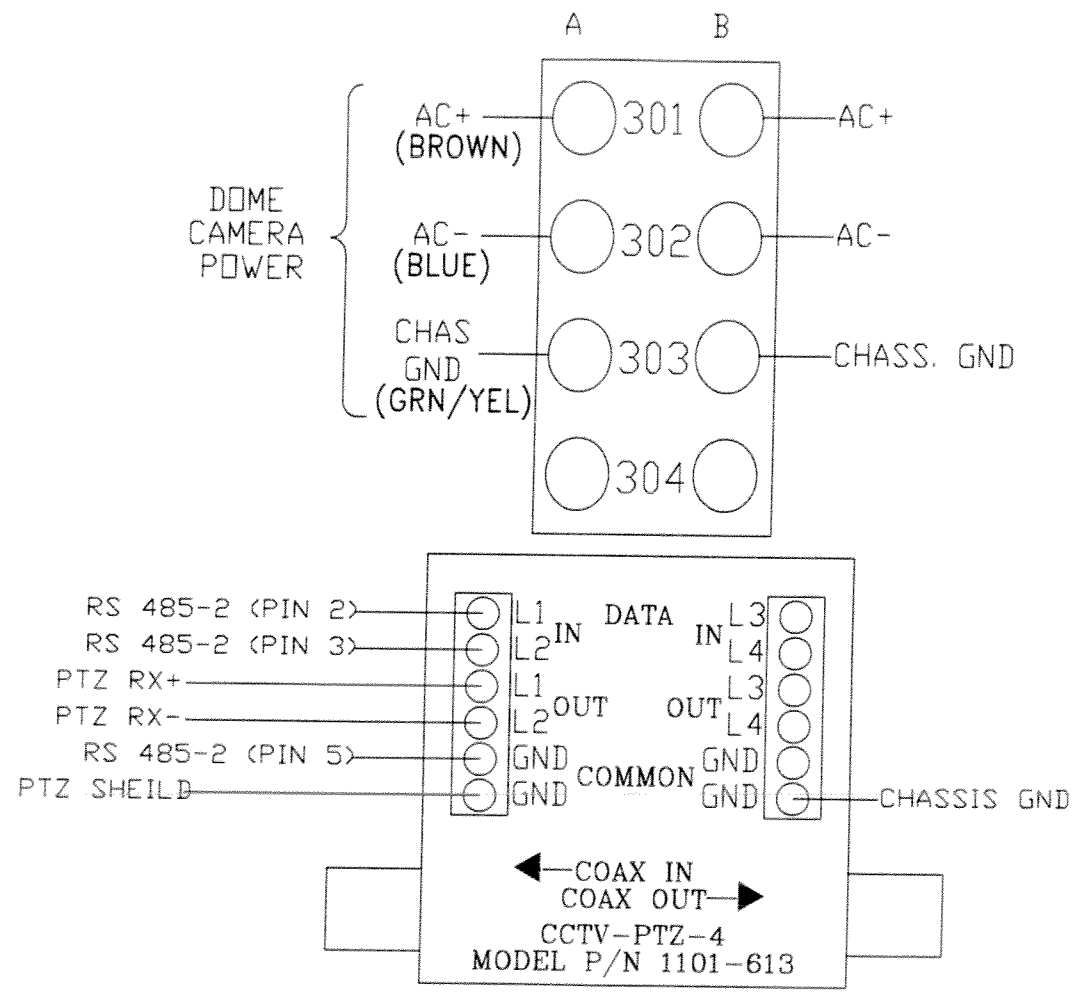

REMOVE JP1 AND JP2 WHEN USING EXTERNAL
POWER SUPPLY FOR THE ASC3 CONTROLLER

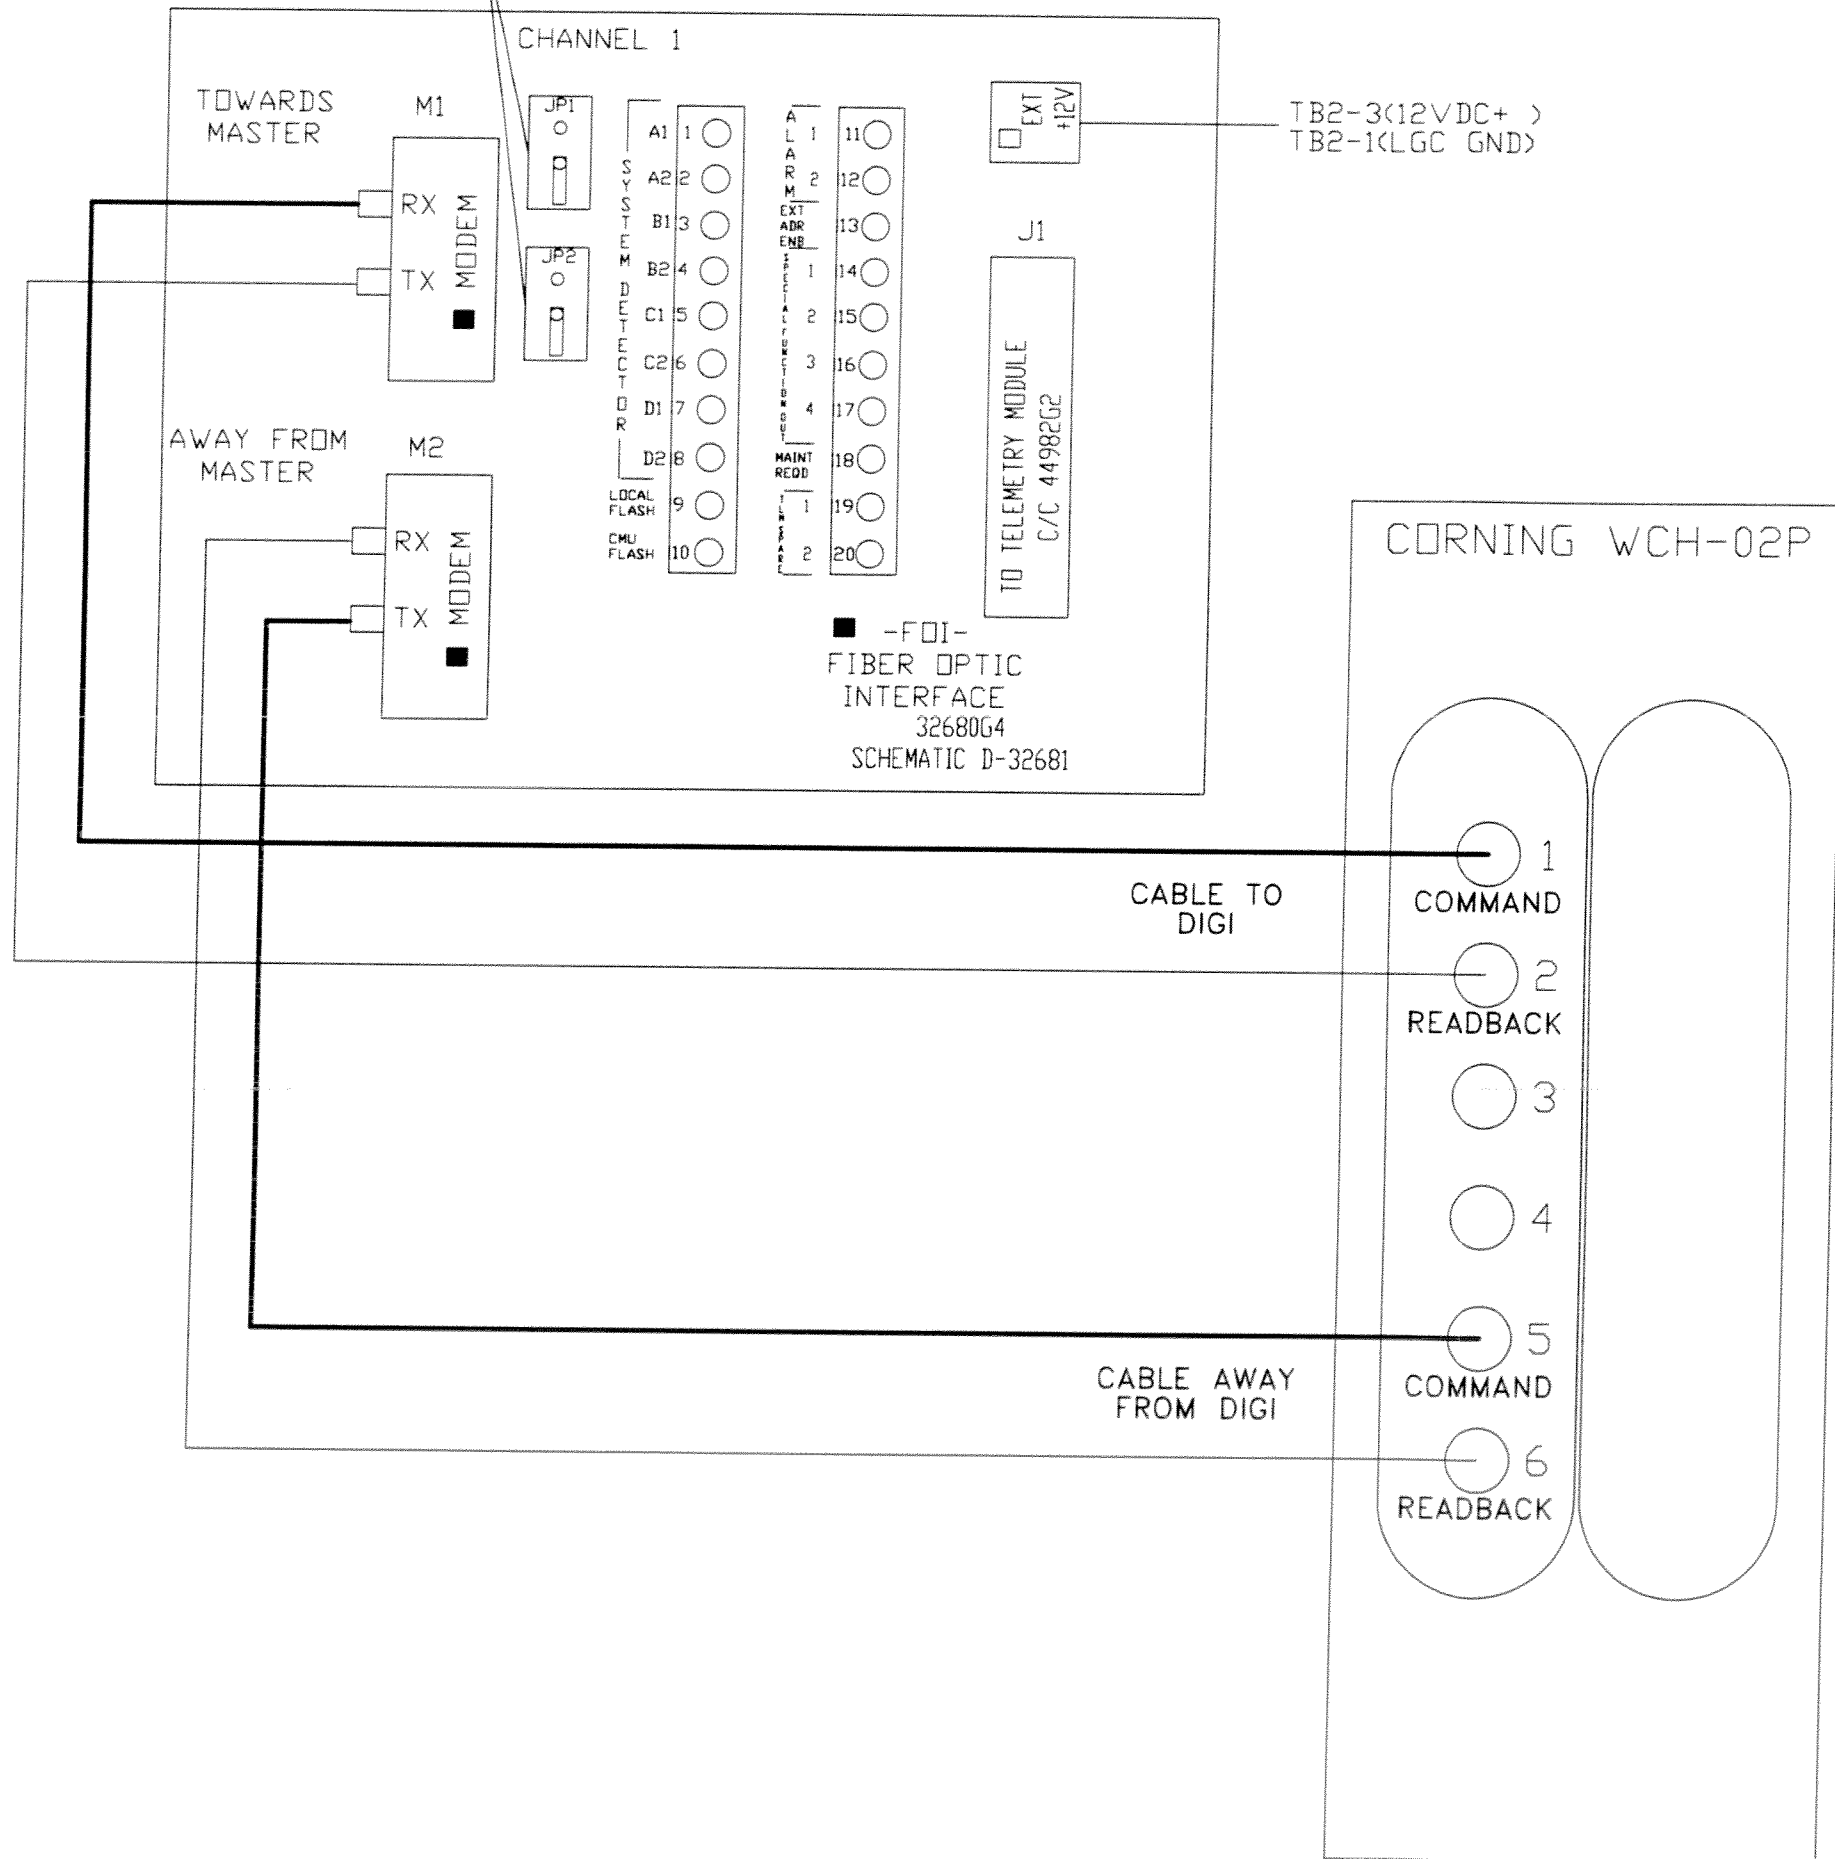

CONT. TELM. PORT		-LT- LOCAL TELEMETRY 32680G4	
J3	J1	COLOR	FUNCTION
3	A4	BLACK	TRANSMIT
2	A3	BLACK	RECEIVE
7	A5	RED	+12 VDC
5	A2	GRAY	SIG. GND.

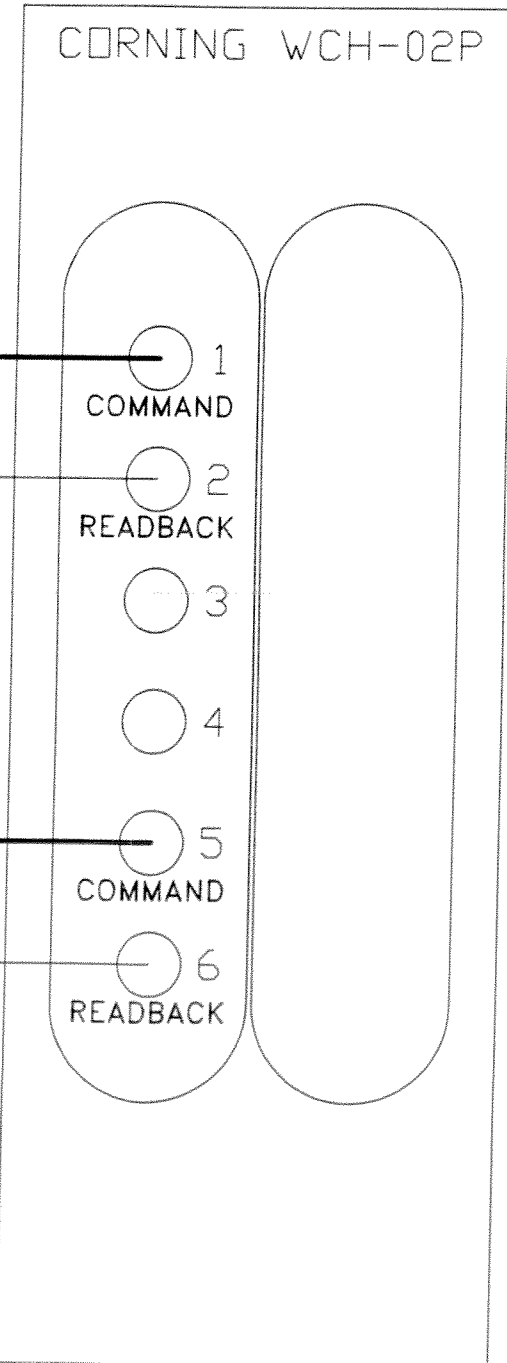

LOCAL RS-232 TELEMETRY (FOI)